

Product Compatibility Guide



Plantronics is pleased to provide this guide for use in determining compatibility between Plantronics products and most major telephone models.

How to use this guide:

1. Description of Columns

Column Name	Description
Manufacturer	Manufacturers are listed in the left hand column in alphabetical order.
Models	Models for each manufacturer are grouped together based on common adapter/amplifier compatibility and switch settings. Certain models may have a (#) appended to them that indicates a descriptive note is available. For more information on phone notes, see item #3 below.
Headsets and Systems	Plantronics headsets and stand alone systems that have been deemed compatible are listed.
Amplifiers and Adapters	The required Plantronics amplifiers and adapters are listed.
Switch Settings	Many telephone/amplifier combinations require that certain switch settings be set for optimal performance. Recommended amplifier switch settings are listed.

2. Phone notes

Certain compatibility relationships require extra instructions on how to configure the Plantronics product for optimum performance. An appendix to this guide contains phone notes outlining instructions for configuring the Plantronics amplifier, adapter, or headset. The presence of a phone note is indicated with a (#) appended to the model number of the phone. The number in parenthesis indicates the number of the corresponding phone note in the appendix of this guide.

3. Need more help?

Call 1 800 544-4660 x 5538 or click on the Support link at www.plantronics.com.

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
3COM	1102, 3C10121, 3C10122, NBX1000	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
		S11	None Required	4	
		CS10	None Required	B	
		CS50, CS55, CS70, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
		CS10	None Required	B	
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1	
		2102(1), 3100(1), 3101(1), 3101SP(1)	CS10	None Required	B
		2102(1), 3100(1), 3101(1), 3101SP(1)	CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	3102(2), 3103(2)	S11	None Required	4
		CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	3106, 3107	M210c, M214c, M220C	None Required	N/A
	3106 Cordless Phone, 3107 Cordless Phone	M210c, M214c, M220C, MX500C	None Required	N/A
ADC TELECOMMUNICATIONS	ADC		P10	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
ALCATEL	201, 203, 2300 Telset, 237501 TLP, 237501 TSP, 2630, 2672, 2673, 2801, 2802, 2803, 2804, 2805, 2806, 2807, 2808, 281075, 281175, 281575, 281975, 282075, 282175, 282575, 282975, 2872, 2873, 3480, 3482, 3484, 4018, 4019, 4028, 4029, 4038, 4039, 4068, 4525, 802, 803, 901 (PQS-7400), 903 (PQS-7403), 904 (PQS-7402), CSF PQS 8002, EKS 320 CONSOLE, MEDALLION 3485, MEDALLION 8575, MILLENNIUM 18 BUTTON TELSET(4), MILLENNIUM 30 BUTTON TELSET(4), Opus-20, Opus-40, Opus-80, PC1008, SKS-2, SYSTEM ECS 54/136 PROPRIETARY, SYSTEM EKS 1664 PROPRIETARY SET, SYSTEM EKS 308 PROPRIETARY SET, TEL-TREX II 3980, TEL-TREX II 3981, TEL-TREX II 3982, TEL-TREX II 3983, TEL-TREX II 3984, TEL-TREX II 3985, TEL-TREX II 3989, VDT 300	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1	
		S11	CA10 MX10	B 5	
		2500(3)	CS10	None Required	4
			CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	B 1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	2502, 2554, 2564, 2565, 2567, 2575, 2576, 2577, 2830, 2831, 2835, 2842, 2843, 2844, 2854, 2861, 2870, 2871, 2900, 29000, 2930, 3554, 501, 502, 507, 550, 554, 564, 565, 576, 577, 601, 830, 835, 842, 8525, 854, 900, ARIES 2912, ARIES 2926, ARIES 2927, ARIES 2928, CITATION 2010, CITATION 2021, CITATION 2022, CITATION 2025, EKS 2701, EKS 401, EKS 616, EKS 701, MEDALLION 2480, MEDALLION 2481, MEDALLION 2482, MEDALLION 2485, SYSTEM EKS 616 PROPRIETARY SETS, TEL-TREX 2980, TRIBUTE 2010, TRIBUTE 2012, TRIBUTE 2015	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	1
	2566	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	4004, 4010, 4020, 4035	S11	None Required	4
		CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	510, CITATION 2020	S11	None Required	4
		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	CS1024 Console	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	PIMPhony(5), PIMPhony IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	P10H None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40 DA55 DA60	N/A N/A
	TD100 Switchboard		P10	
	TRIBUTE 2011	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
			CA10 MX10	B 1
		S11	None Required	4
ALLWORX	9112	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		Generic Headset for Product Finder	None Required	N/A
			A20	
			CA10	
			MX10	
			None Required	
	IP-600(6)	CS50, CS55, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		Generic Headset for Product Finder	None Required	N/A
		S11	None Required	4
			A20	
			CA10	
			MX10	
			None Required	
	IP-710(7)	CS50, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
		Generic Headset for Product Finder	None Required	N/A
		S11	None Required	4
			A20	
			None Required	
	IP Softphone Main Sequence(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
	IPtalk(5)	.Audio 910, CS50USB, DSP-400, M214i, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
AMBI CORP.	Ambi Set, Ambi Terminal	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
AMERICAN PHONE PRODUCTS	Ameriphone RC3000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
AMERIPHONE	Dialogue XL40, JV-35	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
AMTELCO	Operator Station(8)		P10	
ASPECT TELECOMMUNICATIONS	ALL PHONES	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	TELESET 3	CS10	None Required	B
		CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
ASUZI	FT-1, FT-2, FT-3, FT-4, PRO-XL-1032 SETS, PRO-XL-616 SETS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	None Required	4
	PRO-1032 SETS, PRO-616 SETS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	CA10 MX10	B 5
		S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
AT&T	1225, 1278, 1545, 1810, 2500 DMGJ, 2500 DMGK, 2500 MMGJ, 2500 MMGK, 2500 YMGK, 2500MMGT, 2500YMGD, 2500YMGJ, 2500YMGK, 3178 NHL, 6501, 6502, 6504, 6508, 854, 9015PF, 95061M, ANSWERING PHONE 1504, ANSWERING PHONE 1506, ANSWERING PHONE 1510, ANSWERING PHONE 1516, ANSWERING PHONE 1521, ANSWERING PHONE 1531, ANSWERING PHONE 1532, ANSWERING PHONE 1539, ANSWERING PHONE 1545, CS2500 DMGF, CS2554 BMPF, CS6400U09A, CS6401OU1A, CS6402U01A, CS6403U01A, CS6500U010A, CS6500U03A, CS6500U09A, CS6601C02A, CZP 880528, CZP 880611, CZP 881014, FEATURE PHONE 1300, FEATURE PHONE 400, FEATURE PHONE 410, FEATURE PHONE 412, FEATURE PHONE 420, FEATURE PHONE 422, FEATURE PHONE 460, FEATURE PHONE 530, FEATURE PHONE 1600, FEATURE PHONE 620, FEATURE PHONE 622, FEATURE PHONE 700, FEATURE PHONE 712, FEATURE PHONE 720, FEATURE PHONE 730, FEATURE PHONE 732, FEATURE PHONE 812, FEATURE PHONE 822, FEATURE PHONE 842, FEATURE PHONE 843, FEATURE PHONE 854, FEATURE PHONE 855, FEATURE PHONE 870, FEATURE PHONE 882, FEATURE PHONE 905, FEATURE PHONE 922, FEATURE PHONE 925, FEATURE PHONE 970, MEMORY PHONE 110, MEMORY PHONE 610, MEMORY PHONE 612, MEMORY PHONE 710, PHONE FAX 9015PF, SPEAKER PHONE 480, Spirit 6501, Spirit 6502	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	1662, 2500D, 2500DM, 2500DMG, 2500DMGC, 2500DMGF, 2500M, 2500MM, 2500MMG, 2500MMGB, 2500SM, 2511HM, 2515BM, 2554B, 2558DM, 2564HLM, 2565HK, 2565HKM, 2565HKMS, 2565LK, 2565LKMS, 2568HAB, 2575AM, 2630-D, 2630-DA, 2630-DA1, 2630-DAM, 2631-D, 2631-DA, 2631-DA1, 2631-DAM, 2634-DA, 2634-DAM, 2635-DA, 2635-DAM, 2660 A1M, 2662, 2830 A1M, 2830 CM, 2831 A1M, 2831 CM, 2832A, 2832BM, 2832CM, 2851 CM, 2852 AM, 2870 A1M, 2870 A2M, 2872 A1M, 2872 A2M, 2960 A01M, 2981AO1, 2981AO2, 2981AO3, 2982R60, 2983AO1, 2983AO2, 2991, 2992, 2993, 2994, 3100-ITD, 3100-ORD, 3178-SYS, 500CD, 500DM, 500FM, 500LM, 500MM, 558FM, 564HD, 564HL, 568HAA/MD, 575AM, 585HK, 585LK, 630, 630/831CM, 630/831DM, 630DA, 631, 631DA, 635DAM, 662, 832A, 832BM, 832CM, 833A, 833BM, 833C, 833CM, 833DM, 833EM, 851CM, 852, 870 A1M, 870 A2M, 872 A1M, 872 A2M, 960 A01M, 981A01, 981AO2, 981AO3, 983AO1, 983AO2, CS 2702 D, CS 2702 DM, CS2500DMGB, MET SET 2836, MET SET 2837, MET SET 836, MET SET 837	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	200 SET, 3160-111A, 3161-161A, 3161-172A, 3162-417A, 3162-BISA, 3162-DISA, 400 SET, 5001 T01A, 5011 T01A, 510A (3701-010), 510D (3750-512), 6000, 7101, 7102A, 7103A, 7103H, 7104, 7105H, 7317(10), ELITE 320, GENESIS 5 BUTTON SET	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
		S11	None Required	4
	2636CA, 2636CAM, 2637CA, 2637DA, 2637DAM, 310-A1-03, 660 TEST BOARD, 800 TEST BOARD, ACD CONSOLE, ATTENDANT CONSOLE 300A1-A, ATTENDANT CONSOLE 301A1-A, ATTENDANT CONSOLE 301B1-A, COMCORE, SWITCHBOARD CONSOLE 551, SWITCHBOARD CONSOLE 557A, SWITCHBOARD CONSOLE 557B, VMC CONSOLE	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	302-A		P10	
			Prong Base Amplifier	
	3100-TJEB, 3100-TJEI, 50B CONSOLE, CTS Met Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361N with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	3625, 3760, 3770	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	P10	N/A
	5800 Cordless	M175C, M210c, M214c, M220C, MX500C	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	5840 Cordless	M175C, M210c, M220C, MX500C	None Required	N/A
	7302(10), 7303(10), 7305(10), 7308(10), 7309(10), 7313(10), 7314(10), 7316(10), 7318(10)	CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
	812, 822, 843, 855	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	EP5962	CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	GENESIS 10 BUTTON SET, GENESIS 34 BUTTON SET	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
		S11	None Required	4
			P10	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ISDN a2011(11)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
	ISDN a2011-2(11), ISDN i2021(11), ISDN i2022(11)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
AUDIOVOX	2032(12), 9155GPX, BAM110, BAM300D, BAM300DXL, CDM100, CDM120, CDM130, CDM130XL, CDM135, CDM135XL, CDM3000BA, CDM300AT, CDM3150T, CDM4000AT, CDM4000BA, CDM4000XL, CDM7900, CDM8100PP, CDM8200BM, CDM8200BMS, CDM8200VI, CDM8300AT, CDM8300BA, CDM8300TT, CDM8330PP, CDM8410, CDM8600, CDM8600BA, CDM8900T, CDM9000, CDM9500, GD250XL, GDU325, GDU325XL, GDX250, GSM810, PCX1110XL, T300, TDM2500XL	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	BAM-101, BAM-110, CDM-135, CDM-3000, CDM-3000XL, CDM-4000, CDM-4000XL, CDM-4500, CDM-8100, CDM-8150, CDM-8200, CDM-8300, CDM-8500, CDM-9100, CDM-9150X, CDM-9155-GPX, CDM-9200, CDM-9250X, CDM-9500, HGG110, LGC300W, MVX-425, MVX-440, MVX-450, MVX-460, MVX-465, MVX-470, MVX-480, MVX-480XL, MVX-530, MVX-535, MVX-560, MVX-565, PCX-3500XL, PCX1000, TDM-2500, THERA	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	CDM3300, CDM8000XL, CMP3, GDX300, GDX300XL, GDX325, GDX325XL, GDX350, GDX350XL, PCX1000XL, PCX1000XLE, PCX1000XLGTE, PCX1000XLP, PCX1000XLUSU, PCX1000XPL, PCX1100XL, PCX3600XL, WP718, Z800	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
	MVX-430	M110, M114, M124 - DISCONTINUED, M130, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	PPC6600	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	PPC6601	Discovery640, Discovery640E, Discovery645, Discovery665, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	SMT 5600	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M215, M220, M2500, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Tan, MX510-X1, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	XV6600	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer330, Explorer340, Explorer350, M2500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required None Required	N/A
			None Required	
AUGAT MELCO	MAX -128P, MAX-824 CONSOLE	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
AVAYA	Cordless 3810	M110, M170, M175C, M205, M210, M210c, M214c, M214i, M220, M220C, M40, M40Orange, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
Definity 2402(13), Definity 4601 IP(20), Definity 4602 IP(20), Definity 4602sw IP(20), IP Office 5402(30)		ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3	
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries	
		CS10	None Required	B	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3	
		LKA10	CA10	B	
		S11, S12	MX10	3	
		S20	None Required	A	
		Definity 2410(14)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		S11, S12	None Required	2
		S20	None Required	1
	Definity 2410 on IP switch(15)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	3
		LKA10 for IP for Product Finder	MIP Adapter	N/A
		S11, S12	None Required	2
		S20	None Required	1
			None Required	
	Definity 2420(16)	ABT-35, AWH-55, AWH-75	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	3
		S11	None Required	4
	Definity 2420 on IP switch(17)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	3
		LKA10 for IP for Product Finder	MIP Adapter	N/A
		S11, S12	None Required	2
		S20	None Required	1
			None Required	
	Definity 302A Attendant Console(18), Definity 302B Attendant Console(18), Definity 302C Attendant Console(19), Definity Call Master I(38), Definity Call Master II(38), Definity Call Master III(38), Definity Call Master IV(38)		P10	
	Definity 302D Attendant Console(18)	AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	Prong Base Amplifier HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
	Definity 4606 IP(21), Definity 4612 IP(21), Definity 4624 IP(21)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIP 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10	CA10	B
		S11, S12	MX10	3
		S20	None Required	A
		S11, S12	None Required	2
		S20	None Required	1
	Definity 4610 IP(22), Definity 4620 IP(23)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10	CA10	B
		LKA10 for IP for Product Finder	MX10	3
		S11, S12	None Required	A
		S20	MIP Adapter	N/A
			None Required	2
			None Required	1
	Definity 4610sw IP(22)	ABT-35, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10	CA10	B
		S11, S12	MX10	3
		S20	None Required	A
			None Required	2
			None Required	1
			None Required	
	Definity 4620sw IP(25), Definity 4625sw IP(23), IP Office 5420(40)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10 for IP for Product Finder	CA10	B
		S11, S12	MX10	3
		S20	MIP Adapter	N/A
		ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	2
	Definity 4621sw IP(23), Definity 4622sw IP(23)		None Required	1
			None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10 for IP for Product Finder	CA10	B
		S11, S12	MX10	3
		S20	MIP Adapter	N/A
			None Required	2
			None Required	1
			None Required	
	Definity 4630 IP(14), IP Office 5410 on IP switch(14)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 3
		LKA10	CA10	B
		S11, S12	MX10	3
		S20	None Required	A
		S11, S12	None Required	2
		S20	None Required	1
	Definity 4630sw IP(23)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		LKA10 for IP for Product Finder	MIP Adapter	N/A
		S11, S12	None Required	2
		S20	None Required	1
	Definity 6200 Analog	ABT-34, AWH-54, CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			Modular Base Amplifier	
			None Required	
			Partner Base Amplifier	
	Definity 6211 Analog, Definity 6221 Analog	ABT-34, AWH-54, CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			A20	
			CA10	
			M22	
			Modular Base Amplifier	
			MX10	
			None Required	
			Partner Base Amplifier	
	Definity 6219 Analog	ABT-34, AWH-54, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			Modular Base Amplifier	
			Partner Base Amplifier	
	Definity 6402(26), Definity 6402 on IP Switch(27), Definity 6402D(26), Definity 6402D on IP Switch(27), Definity 6408+(26), Definity 6408+ on IP Switch(27), Definity 6408D+(26)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S	None Required	1
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		LKA10	None Required	A
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Definity 6408D+ on IP Switch(27), Definity 6416D+ on IP Switch(27), Definity 6424D+(26), Definity 6424D+ on IP Switch(27), Definity 8503(36), Definity 8510(36), IP Office 5601(41), IP Office 5602(41), IP Office 5602sw(41)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter	None Required	1
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		LKA10	CA10	B
		S11	MX10	5
		LKA10	None Required	A
		S11	None Required	4
	Definity 6416D+(26)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		S11, S12	None Required	2
		S20	None Required	1
			None Required	
	Definity 6416D+M(28), Definity 6416D+M on IP Switch(29), IP Office 5410(14)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	3
		S11, S12	None Required	2
		S20	None Required	1
	Definity 6424D+M(28), Definity 6424D+M on IP Switch(29), IP Office 5610(23), IP Office 5620(23)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10, LKA10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	5
		S11, S12	None Required	2
		S20	None Required	1
	Definity 7100 Analog		Modular Base Amplifier	
			Partner Base Amplifier	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Definity 7401+(31), Definity 7401D(31), Definity 7403D(32), Definity 7404D(31), Definity 7405D(32), Definity 7406+(32), Definity 7406D(32), Definity 7407+(31), Definity 7407D(31), Definity 7410+(32), Definity 7410D(32), Definity 7434D(31), Definity 7444D(31)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		LKA10	None Required	A
		S11, S12	None Required	2
			8400 SOTA	
	Definity 7506 ISDN(33)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		LKA10	None Required	A
		S11, S12	None Required	2
		S20	None Required	1
	Definity 8100 Analog(34)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			Modular Base Amplifier	
			Partner Base Amplifier	
	Definity 8101 Analog(34), Definity 8102 Analog(34), Definity 8110 Analog(34)	AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
			M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			M22	5
			Partner Base Amplifier	
	Definity 8403(35), Definity 8405(35), Definity 8410D, Definity 8411D(35), Definity 8434(35)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		LKA10	None Required	A
		S11, S12	None Required	2
		S20	None Required	1
			8400 SOTA	
	Definity 8410B(35)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		LKA10	None Required	A
		S11	None Required	4
			8400 SOTA	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Definity 8500(36)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		LKA10	CA10	B
		S11	MX10	5
	Definity 9620 IP(37), Definity 9630 IP(37), Definity 9640 IP(37), Definity 9650 IP(37)	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	A 4 3
		CS10, LKA10	None Required	B
		CS70, CS70 with HL10 Lifter	None Required	1
		Supra Elite Wideband AW450N, Supra Elite Wideband AW460N, SupraPlus HW251N, SupraPlus HW261N	HIS Cord	N/A
	Definity Call Master V(39)	AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	6
		DuoPro H151N, DuoPro H161N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Definity Call Master VI(39)	AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required	N/A
	IP Softphone(5)	.Audio 500 USB, .Audio 510 USB, .Audio 550 DSP, .Audio 910, AWH-55USB, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
	Merlin II 7303(10)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
		S11, S12	None Required	3
			None Required	
	Merlin II 7305(10)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
		S11, S12	None Required	3
	Merlin II 7308(10), Merlin II 7313(10), Merlin II 7316(10), Merlin II 7317(10), Merlin II 7318(10), Merlin II BIS 10(10), Merlin II BIS 19(10), Merlin II BIS 22(10), Merlin II BIS 34(10), Merlin II BIS 34D(10), Merlin Legend MLX 10(42)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		CS70	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
Merlin II 7311(10)		S11, S12	None Required	3
		ABT-34, ABT-35, AWH-54, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		CS70	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
			None Required	3
			None Required	2
		Merlin II 7314(10)		S11, S12
ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required			2
AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier			1
CS10	None Required			B
CS70	None Required			1
DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22			5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
		S11, S12	None Required	3
			None Required	
	Merlin Legend MLX 10D(42), Merlin Legend MLX 16D(42), Merlin Legend MLX 20L(42)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
		S11, S12	None Required	3
		S20	None Required	1
	Merlin Legend MLX 28D(42)	ABT-34, ABT-35, AWH-54, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	2
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	Modular Base Amplifier	1
		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	2
			CA10	B
			MX10	2
		S11, S12	None Required	3
		S20	None Required	1
			None Required	
Merlin Magic	4406D+(43)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, Voyager510S	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		CS55, CS70, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		S11, S12	None Required	2
	Merlin Magic 4412D+(43), Merlin Magic 4424LD+(43)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	3
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		CS70	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
		S11, S12	None Required	2
	Merlin Magic 4424D+(43)	ABT-34, ABT-35, AWH-54, AWH-55, AWH-75, CS50, CS55, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	3

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		AvayaPro NC, AvayaPro VT, DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Earset Starter NC, Earset Starter VT, Encore H101, Encore H101N, Encore H91, Encore H91N, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage H41, Mirage H41N, Mirage Ultra NC, Mirage Ultra VT, StarSet H31, StarSet H31N, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra H51, Supra H51N, Supra H61, Supra H61N, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N, TriStar Ultra NC, TriStar Ultra VT	HIC 1 Cord	N/A
		AvayaPro NC, AvayaPro VT, Earset Starter NC, Earset Starter VT, Encore Ultra II NC, Encore Ultra II VT, Encore Ultra NC, Encore Ultra VT, Mirage Ultra NC, Mirage Ultra VT, Starter NC, Starter VT, Supra Elite Bi NC, Supra Elite Bi VT, Supra Elite Mon NC, Supra Elite Mon VT, Supra Starter NC, Supra Starter VT, Supra Ultra II NC, Supra Ultra II VT, Supra Ultra NC, Supra Ultra VT, TriStar Ultra NC, TriStar Ultra VT	M12LUCM Amplifier	4 no batteries
		CS10	None Required	B
		CS70	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	3
			CA10	B
			MX10	3
	Partner 12, Partner 12D, Partner 18, Partner 6, Partner MLS 12(44), Partner MLS 12D(44), Partner MLS 18(44), Partner MLS 18D(44), Partner MLS 34(44), Partner MLS 34D(44), Partner MLS 6(44)	ABT-34, AWH-54, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	3
			None Required	
			Partner Base Amplifier	
Partner 18D		ABT-34, AWH-54, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	3
			A20	
			CA10	
			M12	
			M22	
			None Required	
			Partner Base Amplifier	
Partner 34		ABT-34, AWH-54, AWH-75, CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
	Partner 34D	ABT-34, AWH-54, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL	CA10 MX10 CA10 MX10 None Required Partner Base Amplifier	B 3
		CS10	None Required	B
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10 CA10 MX10 None Required Partner Base Amplifier	B 3
AXON COMMUNICATIONS	AXON 4, AXON 4000, AXON 4V, AXON 8000	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
BBS TELECOM	IPS 308, IPS 416	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
		S11	None Required	4
BELLSOUTH ADVANCED SYSTEMS	2000, 221, 223, 226, 227, 261, 266, 268, 310, 320, 350, 360, 370, 380, 4300, 470, 480, CASCADE 30, HAC 400	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
	9871XWA, 9872XWA, 9873XWA, 9874XWA	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	6
			M22	6
BITRONIC USA	16 BUTTON KEY SET, 2464, 4 BUTTON KEY SET, 8 BUTTON KEY SET (FP-16), 816, EZ PHONE	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
BIZ TOUCH	2, 3	CS10	None Required	2
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	2
			MX10	5
		S11	None Required	4
			None Required	
BLACKBERRY	5210, 6210, 6230, 6280, 6510, 7210, 7280, 7730, 7750, RIM 850, RIM 857, RIM 957	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	5810, 6710 (PDA), 6750, 7230, 7510	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	7100, 7290	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	7250, 7520	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	8700, 8703e	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	RIM 950	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
BROTHER	1170MC, 680MC, 720MC, 780MC, 820MC, CT410CTES, MFC1970MC	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
CADCOM	DBX1200, DBX5000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
CANDELA	AUTOTAS ACD CONSOLE	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
		CARDINAL	CS10	None Required
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	CA10 MX10	B 1
			None Required	4
C.D.T	AP1000, AP2000 (1 line), AP2001 (1 line), AP2002 (1 line), AP3002 (2 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	AP2002 (2 line)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
CINGULAR	2125	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M205, M210, M215, M220, M40, M40Orange, M40S, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	8125	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M215, M220, M40, M40Orange, M40S, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
CISCO SYSTEMS	7902(45)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
	7905(45), 7910(45)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
					A20
					M22
7905G(45)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1		
				M12	
				M22	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
			M22	5	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
	7911(45), 7912(45), 7932G(45)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	N/A
			M22	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	N/A
	7920 Cordless phone(46)	Encore H101-CIS, Encore H91-CIS	None Required	N/A
	7921G(47)	M223-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1	None Required	N/A
	7985(48)	Generic Headset for Product Finder	None Required	N/A
	IP 7931G(49), IP 7940(49), IP 7941G(49), IP 7961G(49), IP 7970(49), IP 7971G(49)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	N/A
			M22	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	Coil Cable QD to Modular Plug for Cisco	N/A
		Encore H101-CIS, Encore H91-CIS	None Required	N/A
	IP 7960(49)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		Encore H101-CIS, Encore H91-CIS	M22 None Required	5 N/A
			A20 CA10 Coil Cable QD to Modular Plug for Cisco	
	IP Communicator(5), IP Softphone 1.3(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
	IP Model 12+(50), IP Model 30 VIP(51)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	DA60 None Required	N/A 1
			A20	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			Coil Cable QD to Modular Plug for Cisco M12 M22	
CLEAR-COM INTERCOM SYSTEMS	Adapt-A-Comm System: Interface AC-10H(52), Adapt-A-Comm System: Interface AC-10K(52), Belt Pack: RS-501(52), Belt Pack: RS-502(52), Belt Pack: RS-522(52), Main Station: CS-210(52), Main Station: MS-200B(52), Main Switchboard Station: SB-412A(52), Main intercom Station: MS-400A(52), Master Station: MS-808(52), Remote Headset Station: MR-102A(52), Remote Headset Station: MR-104A(52), Remote Speaker Station: KB-111A(52), Remote Speaker Station: RM-120A(52), Remote Speaker Station: RM-400A(52), Wall Plate: WP-2(52)	Generic Headset for Product Finder	None Required	N/A
CMX COMMUNICATIONS	Citation	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N S11 Citation SST, EST	None Required None Required M12 M22 A20 CA10 MX10 None Required None Required None Required	B 1 5 5 1 B 5 4 B 1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
CODE-A-PHONE	1050 (1 line), 1350 (1 line), 1390, 1950, 1990, 2670 (1 line), 3100, 3200, 3350, 3390, 3450, 3490, 3570, 4050, 4060, 4150, 4290, 4350, 4650, 516, 5890 (1line), 6950, 7050, 7150, 7410, 7420, 7650, 8100, 8150, 8250 (2 line), 8415 (2 line), 8425 (2 line), 8440 (2 line), CAP 2650, CAP 2650 (1 line), CAP 2670 (1 line), CAP 2690 (1 line), Intrepid: 308	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
COMDIAL / VERTICAL NETWORKS	025M, 1654, 1704, 1705, 1706, 1716, 1800, 1810, 2500, 2501, 2502, 2503, 2507, 2508, 2510, 2527, 2550, 2551, 2552, 2553, 2554, 2556, 2564, 2565, 2567, 2575, 2579, 2800, 2816, 2835, 2842, 2843, 2844, 2851, 2854, 2864, 3500, 3507, 3509, 3528, 3529, 3564, 3567, 4507, 4579, 4625, 4644, 493M, 500, 501, 502, 508, 550, 551, 552, 553, 554, 556, 575, 925M, 961M, 970, 970S, 981M	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		S11	CA10	B
		CS10	MX10	1
		079M, 3525, 3579, 3625, 3644, 3654, 510, 907M, 909M, 979M	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
	M22	1		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	111, 122S, 1432, 1632, 22128, 2232, 2264, 2296, 308, 3502, 3503, 3508, 3523, 3582, 3583, 3593, 3598, 3600, 3609, 3679, 3704, 3714, 3789, 3809, 3810, 3878, 3889, 3910, 3979, 3989, 408, 4709, 4719, 4779, 4789, 4909, 4989, 6016S, 616, 6414, 6509, 6579, 6600, 6614, 6620, 6622, 6701, 6702, 6702X, 6706, 6709, 6714, 6720, 6800S, 6814S, 6820S, 7000 Series, 8012, 8024, 816, 8201n, 824, 8324, 8900 IP, AT 206, ATC E-Z Comm, ATC Impression : AT110, Access 2700 (1 line), Business Phone 2000, DSC Feature Phone, DX80, Executech Solo 3522	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	4509, Image 1: 2805, Image 1: 2806, CS10 Image II: 2830, Image II: 2831, M Plus II (2 line) 4500, Max Key III 3513, Max Plus (1 line) 3625, Max Plus 3513, Max plus 3527		None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	4979, Feb-18, Genie, M Plus II (2 line) 4709, Max Plus (1 line) 3506, Max plus (1 line) 3779, Solo II 5400(53), Solo II 5300(53), Solo II 5500(53), Solo II 5521(53), Solo II 5531(53), Solo II 5631(53), Solo II 5641(53), Voice Express: VX-41B, Voice Express: VX-41C	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	8212s, 8312, 8312s, 8412s	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	900M	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	EP200 Multimedia Endpoint IP Soft phone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
	iPrimo	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	Max Key IV 3514 (3 line)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
		S12, S20	None Required	1
CONAIR	3502 (1 line)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	CM200CS, PR1001, PR2001, PR3001 (2 line), PR6200 (1 line), SW2502, TT2503 (2 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
CONCORD	1024, 612, AV 4/8, AV 8/16, AV16-X, AV32, Concord 10	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Concord 6	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		S11	None Required	4
CONSOLE SYSTEMS	Centurion(52), Microcom(52), MiniCom I(52), MiniCom II(52)	Generic Headset for Product Finder	None Required	N/A
CONVEYANT SYSTEMS	Centrex Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
CORDLESS TELEPHONES	2.4 GHz Frequency w/ 2.5mm Headset Port, 5.8 GHz Frequency w/ 2.5mm Headset Port	CS55H	None Required	2
	900 Mhz Frequency w/ 2.5mm Headset Port	M175C, M210c, M214c, M220C, MX500C	None Required	N/A
		CS55H	None Required	2
		M110, M170, M175C, M205, M210, M210c, M214c, M214i, M220, M220C, M40, M40Orange, M60, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500C, MX500i, MX505 Tan	None Required	N/A
	Without 2.5mm Headset Port	CS55H	None Required	2
COUNTERPATH	eyeBeam SIP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
CREST	CrestPhone II (2 line)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Tracer I (1 line), Tracer II (2 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
CRYSTAL TECHNOLOGIES	PhoneWriter	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	None Required	4
		CA10 MX10	B 5	
CSE TELCOM	Criterion, Deluxe Station Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	None Required	4
		CA10	B	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
CTG	1648, 3264	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
		S11	None Required	4
	2500 e, t/a (1 line), 2e, 2f, 308, 4080, 612, 616, 816	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
CXC	Exec: T2005, Rose PBX T1000, T2064	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	T2001 Personal Terminal, T2002, T2003, T2004	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
CYBER DIGITAL	Integrated Service Terminal	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	IST-12, IST-20	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
CYGNET TECHNOLOGIES	CoSystem	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
DAK	4000 AX	S11	None Required	4	
		CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
			CA10	B	
			MX10	5	
		5000 IRX	S11	None Required	4
			CS10	None Required	B
	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart		None Required	1	
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		M12	5	
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		M22	5	
		A20	1		
		CA10	B		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
DASH	OPS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
DATA PLUS	ACD Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	1
		S11	None Required	4
DATAVOX	Datavox-One	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
DAVID SYSTEMS	Executive Display Set, Standard Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Standard Display Set	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
DAVOX	4900/5900 Workstation, ST100 Auto Dialer	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
DBA	Smartalk, Smartcap	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
DEKA	CD1600M(54), EL400M(54), HF400M(54), HF401M(54)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	EL401M(54)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
DELL	Axim X30h	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A	
	Axim X50	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A	
			None Required		
DELOS	2500	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1	
DETEWE (WINFINITY)	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A	
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A	
			DA55 DA60	N/A N/A	
DIGITAL VOICE CORP	DBX1200/5000, DJ-2905 (1 line), DVS Set	CS10	None Required	B	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
	Telenova Station Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
DTI	ACD console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
DYNASCAN CORP	514 (1 line), 8522, AN8700, RP710S, ST401, ST412, ST500	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		MX10	5	
	ST610, ST620	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		MX10	5	
EADS TELECOM	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
	ITE-760E		DA55	N/A
			DA60	N/A
	CS10	None Required	B	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
EAGLE TELEPHONES	10, 20 Button Set, 40 Button Set, 60 Button Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
	Eagle Single Line	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
			M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
			CA10	B	
			MX10	5	
			S11	None Required	4
		S-Class	CS10	None Required	B
			CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12		5		
	M22		5		
DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20		1		
	CA10		B		
	MX10		5		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	S.P.S.	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
ELMEG	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	4
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55 DA60	N/A N/A
ENTEL CO	UCX 3000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12 M22	1 1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
ENTRALI	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
ERICSSON	751 Console, ARD-561, ASB 102 Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	7700-01	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			P10	N/A
		S11	None Required	4
	7700-05	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			P10	N/A
		S11	None Required	4
	A2218, AF738, AF778, AH600, AH618, AH620, AH628, AH630, CA638, CF688, CF788, DF688, DF738, DH618, DH668, GA628, GF768, GF788, GF788C, GF788E, GH688, GH788, I888, KF688, KF788, KH618, KH668, LX788, R250, R278, R289, R289LX, T18, T19	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	WTA-ER700 Adapter	N/A
	A2218Z, GF337, GF388, R300D, R300LX, R300Z, R320SC, R380, R520MC, T200, T20E, T20EC, T20S, T20SC, T28, T28-WORLD, T28Z, T29, T29S, T29SC, T60D, T60LX, T61, T61Z	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A
	DAB 707, DBA 706, MD110 Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	DBA 180, DBC 225, DBC 502, DBC 531, DBC 561, DBC 562, DBC 601, DBC 631, DBC 661, DBC 662, DFG 220-01, DFG 222-01	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	DBA 203, DBC 501	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Dialog 3210, Dialog 3211, Dialog 3212, Dialog 3213, Dialog 3214, Dialog 4220 Lite, Dialog 4222 Office, Dialog 4223 Professional	CS10	None Required	2
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	2

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
	MD110 Console	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10H	N/A
	R520M	S11	None Required	4
		Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A
	T39, T39M, T68, T68i	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	T610, T616	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	T61c	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
ESI	12 Key DFP, 24 Key DFP, 48 Key HDFP	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	None Required	4
		CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			CA10 MX10	B 5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
EXECUTONE	100, 2312504	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	200, 2056, 2312501, 2312502, 2510502, 2512501, 2512503, 2512505, 2512506, 2512512, 2512513, 2512514, 2512515, 2512516, 2512517, 2612501, 2612503, 400, 83011, Proprietary Set 83010, Vision Phone	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	2882501	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
	2882502	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
	2992501, 2992503, 2992504, 2992506, 2993506	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	2992502	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
			None Required	
	83010, Proprietary Set 83011	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	84100	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Agent Terminal: 84100, Digital set: 82100, Digital set: 82200, Digital set: 82500, Digital set: 82600, Digital set: 82603A, Digital set: 84600, MD110, Model 12, Model 18, Model 32, Model 64	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Console, VISTA I Console, VISTA II Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	E2602502, E2602503, EZ-1/EZ-1 Genus	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	K15105, K21100(56), K21101(56), K21104(56)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Operators Integrated CRT	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	X Trom II	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	1
		S11	None Required	4
EXTROM	1032EE, 612EE	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Extrom II, HMS-616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Extrom III, Extrom IV, HMS-1032, HMS-38	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	1
		S11	None Required	4
FANSTEL	BT118G POTS, ST2118B-TV	Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
FISIO	825	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
FUJITSU	Console: 960, Focus ET1, Focus ET2, Focus H15H, H15D, SBCS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	CS10, CS20, CSD, CT20, Console 9600, DT100A, DT100B, DT101B, DT200B, DT201B, ET10, ET11, ET20, SRS1050, SRS2000, SRS2000V, SRS270D	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
P/N/ 301-820-02(57)		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
	SST SET	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 P10	B N/A
	Starlog Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
FUTURA COMMUNICATIONS, INC	308, 616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
GAI TRONICS	Cohort 12X48, Cohort 3X4, Cohort 6X16, Scope 12X48, Scope 3X4, Scope 3X8, Scope 6X16	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
GALAXY COMMUNICATIONS	1232, 2464, 616, 824, Galaxy Executive Display, Galaxy Standard, TXE 1 Basic	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
GENERAL ELECTRIC	1401	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A	
	2-167, 2-9166B, 2-9168 A, 2-9168A, 2-9400A, 2-9420A, 2-9435A, 2-9435B, 2-9450B(58), 2-9450C(59), 2-9450D(59), 2-9450E(59), Crystal Clear +	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
			M22	5	
			A20	1	
				CA10	B
				MX10	5
			S11	None Required	4
		2-7958	M210c, M214c, M220C	None Required	N/A
	2-9269, 2-9418, 2-9460, 2-9480, 2-9481, 2-9484, 2-9485, 2-9486, 2-9487, 2-9488, 2-9493, 2-9870, 2-9893	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	2-9320A, 2-9393	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	2-9438A, 2-9632A, 2-9980A, 2-9980B	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	2-9450A(58)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	4
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S12, S20	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	2-9451	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			CA10	
			M12	
			M22	
			None Required	
GLENAIRE	2021	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
GOLDSTAR	GPC 2500, GPC 2554, HAC4500, Tek 1648, Tek 616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
GRANDSTREAM	GXP 2000	CS10	None Required	B
		CS50, CS55, CS70, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20 CA10 MX10	1 B 5
GTE	182B, 80E, CS250009 MBA 20M, Feature	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	CA10 MX10	B 1
	2000, 2050, 2100, 2120, 2200, 2300, 2350, 2355, 2400, 7400 Message Center, CS-10, CS-20, CSD, GTE 2010 (1 line), GTE 2104 (1 line), GTE 2245 (1line), GTE 2250 (1 line), GTE 4250 (2 line), GTE 4275 (2 line), GTE 7510 (1 line), GTE 7520 (1 line), GTE Ultraline, GTE Ultrastar, GTE Ultrastar (1 line), Omni SBCS Attendant Console, Station Instrument 9100616000, Station Instrument 9100622000, Station Instrument 9105990000, Station Instrument: 9100617000	CS10	None Required None Required	4 B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	2260 Medalist, 910270-044-PAK, 9102700-004-PAK, HE 860830-WT01, HE 860830-WT02, HE-862-830-WT01, HE-862-830-WT02, HE-868-832-WT14, HE-868831-WT01, HE-869-832-WT01, HE-869-833-WT01, Jupiter, Omni Phone HE-860-830-WT01, Single Line Set: 28824, Single Line Set: 84087	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	Attendant Console: 9100602000	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Attendant Console, GTD 1000 Console, GTD 4600 Turret, PBX120 Console, PBX60	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
HALLICRAFTERS	412 Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
HARPAX	VOIspeed IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
HARRIS DIGITAL CORP	20/20 Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Attendant Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	Optic 4, Optic ACD Set: 780821, Optic ACD: 780898, Optic I, Optic II	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
			None Required	4
HARRIS LANIER	120-3990, 5020-H(61), 5020-S(61), 5020-SD(61), 5025-S(61), 5025-SD(61), 5510-H(61), 5511-H(61), 5514-H(61), 5515-H(61), 5525-H(61), EKT 5010-SB(61), PBX Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	130, Classic, EKT 5500-N (1 line), EKT 6200-N, Easy Talk, L-EKT-10, L-EKT-10S, L-EKT-20S, Smartphone 7050, VIP	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	5015-5S(61), 5015-SB(61)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	1
	DSS Console	S11, S12	None Required	1
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	EKT 201, EKT 210, EKT 220, EKT 2201, EKT 2205, EKT 3102, EKT 4010, EKT 4015, EKT 4020, EKT 4025, EKT 4030, EKT 4035, EKT 4044, EKT 4045, EKT 4047, EKT 4050, EKT 4055, EKT 5101, EKT 5201	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	EKT 5010-5S(61)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	EKT 6510H(62), EKT 6510S(62), EKT 6520H(62), EKT 6520SD(62)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
		S11	None Required	4
HEWLETT PACKARD	2215(63), 3600(63), 3700(63), 3800(63), 3900(63), 4100(63), 4155(63), 4300(63), 4355(63), 5400(63), hx 4700(63), rz 1700(63), rz 1710(63)	M130i, MX100i Mono, MX100i Stereo, Plantronics .Audio 30Hi for Product Finder, Plantronics .Audio 30i for Product Finder, Plantronics M205i for Product Finder	None Required	N/A
	5100(63), 7290, hx 2100, hx 2400, hx 2700	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	5500(63), 6310(63), 6320(63), 6325(63), hx 2110(63), hx 2415(63), hx 2750(63), hx 2755(63)	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M130i, M2500, M3000, M3500, MX100i Mono, MX100i Stereo, Plantronics .Audio 30i for Product Finder, Plantronics M205i for Product Finder, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	5550(63), 5555(63)	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M130i, M2500, M3000, M3500, MX100i Mono, MX100i Stereo, Plantronics .Audio 30Hi for Product Finder, Plantronics .Audio 30i for Product Finder, Plantronics M205i for Product Finder, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	6315(64)	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M130i, MX100i Mono, MX100i Stereo, Plantronics .Audio 30Hi for Product Finder, Plantronics .Audio 30i for Product Finder, Plantronics M205i for Product Finder, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	6515	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M214i, M40, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Tan, MX510-X1, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	HX4705	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M130i, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required None Required	N/A
HITACHI	2001, 2002, 6VLE TURRET, Inteliset 200	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
	500 (digital console), 700, 730, 740, DT5054A, Select Set: 200 (5051A), Select Set: 300 (5052A), Select Set: 400 (5054A)	CS10	None Required	4 B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	ET616D, Inteliset I (MFT)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	HD 100 Attendant Console, HD200 Attendant Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Inteliset II (MFT)	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
	SH-P300	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required None Required	4 N/A
HOMACO	CDS-1, CDS-Mini 100	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
HONEYWELL	Delta Plex 500, Proprietary Set	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Superswitch	S11	None Required	4
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
HTC	I-Mate	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	
INFOGEAR	iPhone	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
INTECOM	Attendant Console-1	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Attendant Console-2, STE Set (1 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ITE 12, ITE 12+, ITE 12S, ITE 4	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	ITE 15D, ITE 21, ITE 24D, ITE 30, Series A ITE 12	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	1
		S11	None Required	4
INTELLITOUCH	420i	Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
INTEQ	824	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	MX10	5
		CS10	None Required	4
INTERGRATED TECHNOLOGY INC	CompuPhone (1 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
INTERNATIONAL	1510 (Phone/answering machine)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
INTER-TEL	1032T	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M12	
			M22	
			MX10	
			None Required	
	1232, 2480, 412T, 616, GX Sets	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
		S11	None Required	4
	1648, 412, 824, Axxess, GLX Key phone	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
	1664T, 2480T	S11 CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	CA10 MX10 None Required None Required None Required	B 5 4 B 1
	4500, 8500	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		S11 CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	CA10 MX10 None Required None Required None Required	B 5 4 B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
	550	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	8520, 8560, 8600, 8620, 8660, 8662, 8690	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Pre-WindSmart, Voyager510SL, Voyager510SL, Pre-WindSmart, Voyager510SL+, Voyager510SL+, Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	DVK phones, ECX-1000, GM Key phone, KTS Exec	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Executive Set	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	IP Softphone(5)	S11	None Required	4
		.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
IP BLUE	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
IPC INFORMATION SYSTEMS	Centre Max I: 00895, Centre Max I: 06088, Series II Turret(67)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Centre Max II: 21608, Centre Max II: 21610	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	IQMX(66), Slimline(66)	S11	None Required	4
	TradeNet I, TradeNet II	CS50-IPC	None Required	1
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
IWATSU AMERICA INC	ADIX Button Set: 16, ADIX Button Set: 56, ADIX Button Set: 8	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10	1
	ADIX Button Set: 24	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10	1
		Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	ET-126, ET-228, Omega II: 1530/2250, Omega III: ET1632, Omega III: ET2460, Omega III: ET412, Omega III: ET816, Omega III: ET824, TXX1648, TXX616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	EX1232, EX1648, EX2464, EX824, IDS 128, IDS Single Line, Omega IV: EX 816, Omega IV: Superkey, Omega-Phone, Presidential, Versaphone, ZS-6KTD, ZS-6KTS, ZT-12D/K, ZT-24D/K, ZT-6D/K, ZT-8D/K	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	IX-12KDT-3	Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S12, S20	None Required	1
			A20	
			CA10	
			M12	
			M22	
			MX10	
			None Required	
	Omega IV: EX616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
JISTEL	Console : 95, Console: 200, Console: 500	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
J-TEC\TELECONNECT	Proprietary Set	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
KANDA TELECOM	616 Base A & C, 616 Executive A & C, 616 Executive Plus, Tel-Basic	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
KEY SYSTEM U. S.	Console, ET-15, ET-36, ET-36D, ET-36DOH, ET-36OH, Et-4	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10	B 5
		S11	None Required	4
KS TELCOM	ST-24HD	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		S11	None Required	4
KYOCERA	1135, 2119, 2135, 2235, 2255, 2325, 2345, 5135, 7135, QCP-2027, QCP-2035, QCP-2035a, QCP-3035, QCP-6035	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	1155, 1900 PDQ Smartphone, 3225, 3245, 6035 QCP Smartphone, 7135 Smartphone, 800 PDQ Smartphone, Blade KX424, K110, K112, Opal S14, Phantom KE413, Phantom KE413C, Phantom KE414, Phantom KX413, Phantom KX414, Phantom KX414C, QCP 2027, QCP 2035, QCP 2035A, QCP 3035, QCP 3035E, Rave KE433, Rave KE433C, Rave KE434, Rave KX434C, Slider KE424C, Slider SE47	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	KX160	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M215, M220, M2500, M40, M40Orange, M40S, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Tan, MX510-X1, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	QCP 1900, QCP 1920, QCP 1960, QCP 2700, QCP 2760, QCP 800, QCP 820, QCP-860, QPHONE 1500, QPHONE 800	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	None Required After Market Adapter	N/A
LENOXX SOUND	PH321, PH322	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
LEXAR BUSINESS SYSTEMS	2011, 2021, 2031, LX 2000Set: 2010	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	LX-Attendant Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
LG (LUCKY GOLDSTAR)	1010, 4NE1, C1300, G4 4010, G4 4015, G4 4020, G4 4050, L1200, LG 1010, LG 110, LG 1150, LG 1200, LG 3000, LG 300W, LG 4010, LG 4011, LG 4020, LG 4050, LG 510, LG 520, LG 5350, LG A7110, LG C1300, LG C1500, LG F7200, LG F9100, LG G4010, LG G4011, LG G4015, LG G4050, LG L1150, LG L1400, LG LX5450, LG LX5550, LG MM535, LG TP1100, LG V111, LG V15225, LG VI-125, LG VI5225, LG VX1010, LG VX2000, LG VX3100, LG VX3200, LG VX3300, LG VX4400, LG VX4500, LG VX4600, LG VX4700, LG VX5200, LG VX5550, LG VX6000, LG VX6100, LG VX7000, LG VX8000, LG VXI, LG VXI0, LG-110, LG-111, LG-V111, LX 5350, TM 510, TM 520, TP 1100, TP 5200, TP 5250, V -125, VI -125, VI5225, VX-1, VX-10, VX2000, VX3100, VX3200, VX4100	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	Chocolate, LG CU400, LG VX9800	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M215, M220, M2500, M40, M40Orange, M43Orange, M43s, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	LG 1300, LG 4500, VX 6100	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
	LG 5200, LG 5400A, LG AX5000, LG C2000, LG UX4750, LG UX5000, SP510	M110, M114, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	LG VX8100, LG VX8300, LX325	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	LG VX8500, LG VX8600	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M60, MHS123, MHS213, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	LG VX9000	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	LG VX9400, LG VX9900	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M60, MHS113, MHS123, MHS213, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	LX 5550	M110, M170, M175C, M205, M210, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX505 Tan	None Required None Required	N/A
	PM325	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	TM910	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required None Required	N/A
	VX 4400, VX 4400B, VX 6000, VX 7000	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	VX9000	M110, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
LITTON	E316, E316R, E324	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	CA10 MX10	B 1
LUCENT	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	4
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55 DA60	N/A N/A
MACROTEL	308E	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	816E, MT-12H(70), MT-12T, MT-12TX, MT-14H(70), MT-16H(70), MT-16T, MT-16TX, MT-207/308 Plus, MT-20D(70), MT-24T, MT-24TX, MT-30T(70), MT-30X(70), MT-3T, MT-3TX, MT-5T, MT-5TX, MT-8T, MT-8TX, MTX Attendant Console, MTX Electronic Set, MTX Executive Display Set, Proprietary Set	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
MAIN SEQUENCE	Main Sequence(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40 DA55 DA60	N/A N/A N/A
MEMOREX TELEX	C179(71), C19A(71), CO78(71)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
MINDSET	MS1202	CS10	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
MITEL	1000 Console(3), Generic 1001, Generic 1003	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	3DN, 4001, 4DN, Digital Console(4), Generic 1000(3), SX 50 Console, Super 1000 Console(3), SuperSet 3, SuperSet 420(72), SuperSet 430(72), SuperSet 7, SuperSet4, Superset I, Superset II	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
		CS10	None Required	B
4015		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
4025		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
		4125	CS10	None Required
	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1	
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
		M22	5	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	4150(3)	CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	5000 IP, 5010 IP, 5020 IP, 5020i IP, 5040i IP, 5055 IP, 5055 SIP	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	5201 IP, 5205 IP, 5207 IP, 5210 IP, 5212 IP, 5215 IP, 5220 IP, 5224 IP, 5230 IP, 5235 IP, 5240 IP(1), 5550 IP	CS10	None Required	B
		CS50, CS55, CS70, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	5330 IP(3), 5340 IP(3)	CS10	None Required	B
		CS50, CS55, CS70, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Console, Generic 217 Console, SX 100 Console, SX 20 Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Management Workstation	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	SuperConsole 2000	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
	SX 2000 Console, SX 2000VS Console	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			M22	5
			A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		S11	None Required	4
	SX 200 Console, SX 200vs Console	CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
		S11	None Required	4
			None Required	
MITSUBISHI	AH127, AH163, AH169, G100, G200, G250, T255, T300, T330	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	AH-129, AH-131, AH-139, AH-250, AH-350, AH-3500, AH-355, AH-4000, AH-5000, AH0270, G-100E, G-150, G-310, G-340, G-360, G-410, G-75, T-200, T-250	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
MODULAR COMMUNICATION SYSTEMS	Mod-U-Com Console(52)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
MOTOROLA	270C, C333, C336, C350, C353, C359, i205, i35S, i60C, i730, i88S, i95CL, i305, i530, i60c, i730, i733, i80s	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	280C, Accompli 009, CellStar, Micro TAC 650, Micro TAC 650-PIPER, Micro TAC Lite XL, MicroTAC 650e, MicroTAC Elite, MicroTAC Lite II, P8767, StarTAC 6000c, StarTAC 6000e, StarTAC 6500, StarTAC 7868, StarTAC 8600, StarTAC ST7760, StarTAC ST7790, StarTAC ST7860W, StarTAC ST7867W, StarTAC ST7868W, StarTAC ST7897, T193, T300, Talkabout T2260, Talkabout T2267, Talkabout T2282, Talkabout T8160, Talkabout T8167, Timeport 270C, Timeport P280, Timeport P7382C, Timeport P7382i, Timeport P7389, Timeport P8097, Timeport P8160, Timeport P8167, Timeport P8197, V100 Pers. Comm., V180, V188, V200 Pers. Comm., V220, V2260, V2267, V2282, V2397, V260, V262, V266, V3620, V726, V8162, i265, i275, i30SX, i315, i355, i50SX, i50sx, i55SR, i58sr, i58sx, i80, i85, i850, i85s, i860, i90C, i90CL, r750plus FM	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	800 Bag Phone, A388, A840, C139, C250, C256, C290, C331, C332, C341, C343, E310, E398, L7082, L7089, M3097, M3682, MPX200, P270, P280, P7389i, Profile 300, Profile 700, SC3160, StarTAC 3000, StarTAC 7000, StarTAC 7762, StarTAC 7767, StarTAC 7790i, StarTAC 7797, StarTAC 8000, T193M, T2290, T2297, T280, T722i, V2290, V2297, V300, V60c, V60x, V8160	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-M1, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	9300, RAZR V3, SLVR, i605	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	A630, E815, V330, V500, V505, V525, V540, V600, V710	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-M1, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required None Required	N/A
	C550, C650, T250i, T280i, V150, V50, V80, i325, i710, i83, i830, i833, i835, i836	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required None Required	N/A
	Centracom 2(52), Centracom 2 Plus(52), Centracom Elite(52), Centracom Gold(52), Centracom I(52), Mitrex Super Console(52), T1600(52), T1602(52), T1603(52), T1604(52), T1605(52), T1606(52), T1609(52)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	i1000+	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Nextel Adapter	N/A
		M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
	i1000, i1550, i2000, i2000+, i370, i390, i500, i500+, i550+, i600, i700, i700+, iM1100	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Nextel Adapter	N/A
	i550	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
	i870	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	L7c, MotoQ	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M40S, M60, MHS113, MHS123, MHS213, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A
	MicroTAC SC-725	M110, M114, M124 - DISCONTINUED, M135, M170, M175C, M205, M210, M214i, MX150, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX500i, mx100	None Required None Required	N/A
	MicroTAC Select 3000e, MicroTAC Select 6000e, Select 2000, Select 2000e	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Motorola Adapter	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	MPX220	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	PEBL	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required None Required	N/A
	STU III	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
	T720i	MX153-M1, MX256-M1 Black	None Required	4
	T720, T721, T721i, T730, T731, V120, V120c, V120e, V120t, V120x, V60, V60g, V60gi, V60i, V60p(73), V60t, V60ti, V65, V66, Vader 8000 & 3000 series	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-M1, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	V190	M110, M114, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	V265, V400, V70	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-M1, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX500i, MX505 Tan	None Required	N/A
	V547, V551, V555	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M130, M135, M170, M175C, M205, M210, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-M1, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-M1 Black, MX300 White, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	V810	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E	None Required None Required	N/A
MURATA	M4500, M700, M750	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required None Required M12 M22 A20	B 1 5 5 1
		S11	None Required	4
MYJABBER	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required DA40	N/A N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			DA55	N/A
			DA60	N/A
NATIONAL TELECOM	116-6502, 117-6526	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	2B/2C Console, ACDII Agent Set	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	ACD IV: 113-6064	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
NBX CORP	Business Telephones	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
NEC	1400 Console: SN610(74)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	1
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	1
		S11	None Required	4
	200, 300, 3610, 3625, 3760, 3770, 400, 515, 525, 600, 900, DT2000, DT2000 DLX, DT2100, DT3100, EXEC 700, EXEC 701, MAX 2100, MF5A1B/F, NEX 2600, P100, P110, P120, P180, P181, P182, P200, P300, P400, P515, P600, P688, P7, P700, P701, P760, P761, P777, P8, P800, P810, P820, P840, T810, T840, Talktime MAX 920, Talktime MAX 960	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	600P, Dterm 10: ETT-X-1, Dterm 2: ETT1-1, Dterm 2: ETT1-2, Dterm 500: ETT-D-1, ET16-3, ET16-3P, ET16-4, ET16-4P, ET16D-3, ET16D-4, ET16DC-1, ET16H-3, ET16H-3P, ET16H-4, ET16H-4P, ET24DS-1, ET6-1, ET6-1P, ET6-2, ET6-3, ET6-3P, ET6H-1, ET6H-1P, ET6H-3, ET6H-3P, ET8-3, ET8-3P, ET8-4, ETJ-8-1, ETW16-1(75), ETW24(75), ETW8-1(75), ETZ-16, ISDN: Dterm 3010	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ACD Terminal: ETT16S-1, Dterm 4: ETT4-1, Dterm 5: ETT 16-1, ETE16D-1, ETE16K-1, ETE6-1, ETE6D-1, ETZ-16D	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10H	N/A
		S11	None Required	4
	Aspire, D Term Series E, DTerm Series i	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			None Required	
	Console 12, Console 22, Console 2400, Console 409, HA710, HA750Z HDAC (N. America), HA752Z HDAC (Australia), HAC610Z, SN619, SN654		P10	
	DS-1000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
		S11	None Required	4
	DS-2000	CS10	None Required	B
		S20	None Required	1
			A20	
			CA10	
			M12	
			M22	
			MX10	
			None Required	
	Dterm 4B: ETT 8-1	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10H	N/A
		S11	None Required	4
	Dterm Series II: ETE-1HM-2, Dterm Series III	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
	DTerm Series IP	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	DTH-16D-1, DTP-16, DTP-16D, DTP-32, DTP-32D, DTP-8, DTP-8D, DTU-16, DTU-16D, DTU-16D-2, DTU-32, DTU-32D, DTU-8, DTU-8D	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	ET14-2, ET14-3, ET14-4, ET14-5	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	ET16-1, ET16-2, ET16H-1, ET8-1, ET8-2, KeySet (ET20-1)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	ET8-4P	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ETE 1-2, ETE 6-2	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10H	N/A
		S11	None Required	4
	ETE-16D-2, ETE-6D-2	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
			P10H	N/A
	ETJ 16DC-1	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
	ETJ 16DC-2	S11	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			None Required	
	ETJ 16DD-1, ETJ 16DD-2, ETJ 16DS-1, ETJ 16DS-2, ETJ 8-2, ETJ 81S, Elecktra Elite IPK	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	HA751Z HDAC (Japan)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required DA40	N/A N/A
	NEAX 1400 (SN610)(76)	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required None Required A20	B 1 1
	SN716, SN716 - A, SN716 - B, SN716 - C	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+ DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10 None Required M12 M22 None Required M22	B 5 4 4 B 1 5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
NICHO INC	ITT 2564, ITT 2830	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
NITSUKO	Optima, Optima 1240, Optima 2470	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
			None Required	4
NOKIA	100, 101, 121, 201, 211, 232, 239, 252	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
	1100, 1221, 1260, 1261, 2260, 2600, 2651, 3310, 3320, 3330, 3350, 3360, 3361, 3390, 3395, 3410, 3510, 3520, 3560, 3590, 6010, 6510, 6590, 6590i, 8210, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8810, 8850, 8860, 8890, 8890g	M133-N1, M206-N1, M223-N1, M40-N1, M60-N1, MX103-N1, MX153-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1, mx103-n1	None Required	N/A
	2115i, 2270, 2275, 2285, 2285i, 3100, 3200, 3205, 3300, 3570, 5100, 5140, 6015i, 6016i, 6019i, 6100, 6101, 6102, 6106i, 6109i, 6115i, 6200, 6225, 6560, 6585, 6610, 7210, 7250, 7250i, 7270	M60-N3, MX153-N3, MX256-N3 Black, MX303-N3, MX510-N3	None Required	N/A
	2116i, 6800	MX153-N3, MX256-N3 Black, MX303-N3, MX510-N3	None Required	N/A
	2160, 2168, 2170, 2180, 2190, 623, 636, 638, 918	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Nokia Adapter	N/A
	2366i, 3120	MX203-N3 Black, MX256-N3 Black, MX303-N3, MX510-N3, MX510-N3 Black	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	282, 2855, 2865, 3155i, 6061, VI-3155	M110, M170, M175C, M205, M210, M210c, M214c, M215, M220, M220C, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500C, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black	None Required	N/A
	3210, 3260, 3285, 6120, 6160, 6168	M133-N2, M206-N2, MX103-N2, mx103-n2	None Required	N/A
	3220	MX153-N3, MX303-N3, MX510-N3	None Required	N/A
	3250	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	3585(77), 3585i(77), 3586, 3587i(77)	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, M60-N3, MX100, MX100s, MX150, MX153-N3, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-N3 Black, MX300 White, MX303-N3, MX500i, MX505 Tan, MX510-N3	None Required	N/A
	3586i	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, M60-N3, MX100, MX100s, MX150, MX153-N3, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-N3 Black, MX300 White, MX303-N3, MX500i, MX505 Tan, MX510-N3, mx100	None Required	N/A
	3588(77), 3588i(77), 3589, 3589i	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, M60-N3, MX100, MX100s, MX150, MX153-N3, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-N3 Black, MX300 White, MX303-N3, MX500i, MX505 Tan, MX510-N3, mx100	None Required	N/A
	3595	M133-N1, M206-N1, M223-N1, M40-N1, M60-N1, MX153-N1, MX256-N1 Black, MX303-N1, MX510-N1, mx103-n1	None Required	N/A
	3600, 3620	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M133-N1, M206-N1, M223-N1, M2500, M3000, M3500, M40-N1, M60-N1, MX153-N1, MX256-N1 Black, MX303-N1, MX510-N1, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, mx103-n1	None Required	N/A
	3650(78), 3660, N-Gauge, N-Gauge QD	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M133-N1, M206-N1, M223-N1, M2500, M3000, M3500, M40-N1, M60-N1, MX103-N1, MX153-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, mx103-n1	None Required	N/A
	5120, 5125, 5185i, 6161, 6162	M133-N2, M206-N2, mx103-n2	None Required	N/A
	5160, 5165, 5170, 5170i, 5180, 5180i, 5185, 5190, 5210, 6170, 6185, 6185i, 6190, 6210, 6340, 6340i, 6360, 6370, 6385, 6390, 7160, 7190	M133-N2, M206-N2, MX103-N2	None Required	N/A
	6030	M206-N1, M223-N1, M40-N1, M60-N1, MX153-N1, MX256-N1 Black, MX303-N1, MX510-N1	None Required	N/A
	6103	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, MX256-N3 Black, MX303-N3, MX510-N3, Pulsar590, Pulsar590E, Voyager510, Voyager510USB	None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	6165, 6165i, 6215i, 6235i, 6236i, 6256i, 6265, 6305i	M110, M170, M175C, M205, M210, M210c, M214c, M215, M220, M223-N1, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500C, MX505 Tan, MX510-X1, MX510-X1 Black	None Required	N/A
	6230, 6620, 6650, 6820, N90	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, M60-N3, MX153-N3, MX256-N3 Black, MX303-N3, MX510-N3, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	6255i	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer330, Explorer340, Explorer350, M2500, MX153-N3, MX256-N3 Black, MX303-N3, MX510-N3, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	6310, 6310i	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M133-N2, M206-N2, M2500, M3000, M3500, MX103-N2, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
	6315, 6315i	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	6600, 7280, 8801	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M206-N1, M223-N1, M2500, M40-N1, M60-N1, MX103-N1, MX153-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	6651, 6670, 6682, 6822, 9300, 9300i, 9500	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, MX153-N3, MX256-N3 Black, MX303-N3, MX510-N3, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
	7610(77)	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudiolQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX153-N3, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-N3 Black, MX300 White, MX303-N3, MX500i, MX505 Tan, MX510-N3, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
	7650	M206-N1, M223-N1, M2500, M40-N1, M60-N1, MX103-N1, MX153-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	8910, 8910i	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Nokia Adapter	N/A
NORSTAN	All	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
NORTEL	1120E IP(79)	CS10	None Required	4
		CS50, CS55, CS70, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N	None Required	N/A
	1140E IP(79)	CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		Discovery655 AudioIQ, Discovery665, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N, Voyager510	None Required	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
			None Required	
	1150E IP(79)	CS10	None Required	B
		CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N	None Required	N/A
		S11	None Required	4
	2564, Vista/PowerTouch 480e, Vista/PowerTouch 480i	Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	2565, 500, 554, 564, 565, NT4L11AD, QSK3500, QSK3564, QSK3565, QSQM100, QSQM2500	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	500	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
	7406 (Cordless Phone), T7406	M175C, M210c, M214c, M220C, MX500C	None Required	N/A
	9617, M1109, M1309, M200409, M2009, M2018, M2112, M3000, NT032AA, NT2N04AA1112, NTZ08AB, NTZ08BA (M2008), NTZ31AA, NTZK06AA, NTZK06BA (M2008), NTZK08AA, NTZK16AA, NTZK20AA, NTZK20AB, NTZK20BA (M2016S), NTZK20BB (M2016S), QSU71	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	ACD II (M2216)(80), ACD Set: QSU7, Agent Console, Agent Console NT4X094B, Agent Console NT4X09AG, DMS 100 Console, M2216 (ACD II)(80), Meridian 1 Attendant PC, QCN100, QCN101, QCN102, QCW2, QCW3, QCW4, QCW5, QSU 63, QSU 67, QSU6 (Canada), Service Attendant Console: NT4X09AG, T.O.P Station	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	ACD I (M2216), M2216 (ACD 1), M7208 (NT8B30), NTZK23AA	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ACD Set: QSU1, ACD Set: QSU3, QSU 1, QSU 3	S11 DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required P10H	4 N/A
	Bell Vista 350, Debut, M2317 (NT1F21)(81), M3901(1), M4020, M5009, M5112, M5209, M5317, M7100 (NT8B14), M8009, M8314, M8400 (NT4L10AD), M8417, M8600 (NT4L04AA), M8600 (NT4L04AB), M8600 (NT4L14AA), M8600 (NT4L14AB), M9216, M9316, M9417(4), Maestro: ISDN Set, NT1K00, NT1K02, NT4L10AA, NT4L11AA/AD, NT4L12AA, NT4L12AB, NT4L12AC, NT4L12AE, NT4L12AF, NT4L12AG, NT4L15AA, NT4L15AC, NT4L17AA, NT4X20AB, NT4X20AL, NT4X20AM, NT4X21AA, NT4X2210, NT6K00, NT6K07, NT6K10, NT6K90, QSFE 220, QSFE 2206, QSFE 2500, QSFE2500, QSHE 2200, QSHE 2206, QSKE 2500, QSKE 2554, QSQE 2500, QSQE 2591, QSQE/QSFE 2001 FX, QSQE/QSFE 2201 1BX, QSQE2500, Quick Touch: 8001FWE-42, Rapport, Rapport Plus, Vantage 12, Vantage 24, Vantage 48, Vantage 48C, Vantage 8, Vantage Espirit/Plus, Vantage Modular	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10	B 5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
	Computer Terminal NT4X73	CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
			M22	5	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B	
			MX10	5	
		S11	None Required	4	
		Harmony: 800FWE-01	CS10	None Required	B
			CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
			DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
				M22	5
			DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
	CA10		B		
	MX10	5			
	S11	None Required	4		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	i2002	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	CA10 MX10 None Required	B 5 N/A
		S11	None Required	4
	M1009, M2616 (NTZK16BA)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	M1250	S11	None Required	4
			P10/2250 for Product Finder	
	M2006	CS10	None Required	B
		CS50, CS55, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	M2008	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
	M2250	DuoPro H151N, DuoPro H161N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10 None Required	B 5 N/A
	M3902(1)	CS10 CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	P10/2250 for Product Finder None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
	M3903(1)	S11 CS10 CS50, CS55, CS70, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	CA10 MX10 None Required None Required None Required	B 5 4 B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	M3904(1)	CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	M3905(82)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			MX10	5
		Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11, S12	None Required	1
			A20	
			M22	
			MX10	
			None Required	
	M4000, M8001, M8003	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			None Required	
	M5006, Maestro 1500CW, Maestro 1500EV, Maestro 3500, Maestro 3500CW, NT4L04, NTD 9421, Power Touch 100, Power Touch 200, Power Touch 226, Power Touch 250, Power Touch 350, Power Touch 452, QSHE 2500, Venture	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	M5008	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
M5208		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
			None Required	4
M5212, M5216		CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	M5312, NT4X20AT	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	M5316, M6310, NT4X31EA, NT4X36EA, NT4X37EA, NT4X40, NT4X41, NT4X42, QSFE2591	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		
			CA10	B
			MX10	5
			None Required	4
			None Required	B
		M6320	S11	None Required
CS10	None Required		B	
CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required		1	
DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12		5	
	M22		5	
	A20		1	
DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N				
	M22		5	
	A20		1	
	None Required		4	
	None Required		B	
	CA10		B	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
	M7308, M7310 (NT8B20), M7316, M7900 (NT8B50)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	M7324 (NT8B40), Powertouch 390, T7208, T7316, i2004	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	M8004, T7100, i2004 POE (Powered Over the Ethernet)(84), i2004 Phase II(84)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	5
		S11	None Required	4
	M8300 (NT4L01AH), NT4L01AF, NT4L14AB	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	M9009, M9516	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	Maestro 2500, Vista 350	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	NT4X20AA(83)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
		S11	None Required	4
Pro 189		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
			MX10	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	QSK 200, QSK 201, QSK 2200, QSK 2201, QSK 3200	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1 no batteries
		DuoPro H151N, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	None Required	N/A
	QSU60BQM, QSU60CFM, QSU60CQM, QSU61BQM, QSU61CFM	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
			CA10	B
			MX10	1
			P10H	N/A
	QSU61CQM	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10H	N/A
		S11	None Required	4
T7613		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	Vista/PowerTouch 480	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			CA10	
	WLAN 2210 Wireless IP Handset, WLAN 2211 Wireless IP Handset	PTH100, PTH200	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
NORTHWESTERN BELL	1500: 61160, 1600: 61170 2000, 22455, 24900, 24910, 24920, 24930, 2700, 2700S, 2702S (2 line), Competitor (2 line): 21430, Competitor Plus: 21410, Competitor: 21420, Easy Touch: 22411, Photo Touch: 53011	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		S11	CA10	B
		S12, S20	MX10	5
		CS10	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		S11	CA10	B
			MX10	5
	None Required	4		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	2-Line Set: 51550(85), 21550 (2 line)(85), 51450(85), 51570(85), 76002, 77015, Digitel: 78002, Digitel: 78003, Integra 75000, Integra Executive 75005, Traditional: 51280(85)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	51530(85)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
OKI	1145	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	1150, 1300, 1325, 1335, 1375, 1400, 1410, 1415, 1430, 1433, 1435, 1475, CD-3500	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	Discovery 3, Spectrum 400	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Spectrum 100 Attendant Consoles	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
ORBACOM SYSTEMS	TDM-150 Console(52)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
ORGIN	200 Voicephone	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
			None Required	4
PACKET 8	Packet 8 Cordless phones	M210c, M214c, M220C, MX500C	None Required	N/A
	Packet 8 Desktop Phones	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
PAC TEL	100 (TIE, 612), Basic Plau (TIE), FA4000, FA4050 (1 line), FA4100 (1 line), FA4200, FE5000, FE5100 (1 line), FE5150, FE5200 (1 line), FE5300 (2 line), Voice Express (Comdial)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	300 (Merlin 410, AT&T)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
			P10	N/A
		S11	None Required	4
	400 (TIE EK1232), 700 (TIE, VDS)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	500 (ATI, Focus 50/100), PB25001-B (1 line), Smartset (TIE)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	Basic 500/2500	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	TR 2554 (1 line)	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required None Required M12 M22 A20 CA10 MX10	B 1 1 1 1 B 1 4
PALMONE	Treo 180, Treo 300	M133-N1, M206-N1, M223-N1, M40-N1, M60-N1, MX153-N1, MX256-N1 Black, MX303-N1, MX510-N1, mx103-n1	None Required	N/A
	Treo 270, Tungsten W (PDA)	M133-N1, M206-N1, M223-N1, M40-N1, M60-N1, MX103-N1, MX153-N1, MX203-N1 Black, MX256-N1 Black, MX303-N1, MX510-N1, mx103-n1	None Required	N/A
	Treo 600	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
	Treo 650	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required None Required	N/A N/A
	Treo 680, Treo 700w	M110, M170, M175C, M205, M210, M220, M40, M40Orange, M60, MX200 Black, MX250 Black, MX250 White, MX300 White, MX505 Tan	None Required	N/A
	VISORPHONE	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
PANADYNI	DID Switch	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
PANASONIC	3170 (1 line), KX--T 2131, KX-D 4130, KX-D 4985, KX-F 100, KX-F 120, KX-F 155, KX-F 195, KX-F 230, KX-F 3000, KX-F 3100, KX-F 50, KX-F 500, KX-F 550, KX-F 850, KX-F 90, KX-FP 270, KX-T 2010 (1 line), KX-T 2130, KX-T 2135, KX-T 2150, KX-T 2220, KX-T 2221, KX-T 2255, KX-T 2260, KX-T 2310, KX-T 2315, KX-T 2320, KX-T 2322, KX-T 2325, KX-T 2330, KX-T 2335, KX-T 2340, KX-T 2341, KX-T 2342, KX-T 2345, KX-T 2355, KX-T 2356, KX-T 2360, KX-T 2365, KX-T 2390, KX-T 2410, KX-T 2415, KX-T 2420, KX-T 2421, KX-T 2422, KX-T 2425, KX-T 2427, KX-T 2429, KX-T 24292427, KX-T 2432, KX-T 2475, KX-T 2620, KX-T 2622, KX-T 2630, KX-T 2632, KX-T 2634, KX-T 2720, KX-T 2740, KX-T 2840, KX-T 2850, KX-T 3120, KX-T 3122, KX-T 3130, KX-T 3135, KX-T 3142, KX-T 3145, KX-T 3150, KX-T 3155, KX-T 3160, KX-T 3165, KX-T 3170, KX-T 3175, KX-T 3204, KX-T 3250, KX-T 3280, KX-TS 2020W, KX-TS 23W, KX-TS 25W, KX-TS 400W, KX-TSC50-B(89), KX-TSC55-B (2 line), KX_T 2415, RC-T350, RC-T420 (2 line), RC-TX91 (1 line), VA 41220, VA 41221, VA 41222, VA 61420, VA 61421, VA 61422, VA 61423, VA 8070 (1 line), VA 8075 (2 line), VA 8100, VA 8120, VA 8130, VA 8150, VA 8160, VA 8200, VA 9230, VA12020, VB-42210, VB-42211, VB-42212, VB-42213	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Alure, Atlas, EB-H10, EB-H105, EB-H20, EB-H205, EB-H40, EB-H55, EB-H66, EB-H70, EB-TX310 (Alure), EB-TX320 (Versio)	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	EB-TX210 (Promax), EB-TX220 (Duramax)	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Panasonic Adapter	N/A
	EB-TX310, EB-TX320, GD55, GU87	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	KX-FPG377(87), KX-TG2770, KX-TG4000, KX-TGA400B	M210c, M214c, M220C	None Required	N/A
	KX-T 123210, KX-T 123220, KX-T 123230, KX-T 123235, KX-T 123250, KX-T 7020, KX-T 7030, KX-T 7130, KX-T 7220, KX-T 7235, KX-T 7425, KX-T 7434, KX-T 7565, KX-T 96300B, Kx-T 7130	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	KX-T 7230	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	KX-T7250	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
KX-T7420, KX-T7425, KX-T7431, KX-T7433, KX-T7436, KX-T7453, KX-T7456, KX-T7630, KX-T7636, KX-T7720, KX-T7730, KX-T7731, KX-T7735, KX-T7750, KX-TS105, KX-TS108, KX-TS208, KX-TS3, KX-TS3282, KX-TS6, KX-TSC12, KX-TSC14, KX-TSC7				

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	KX-T7633(88)	S11	None Required	4
		CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	KX-TG6500	S11	None Required	4
		M210c, M214c, M220C, MX500C	None Required	N/A
	KX-TMC97-B, KX-TMC98-B (2 line), VA 8205	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	VB-43210(72), VB-43220(72), VB-43223(72)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	VB-43221(72), VB-43225(72), VB-43320(72), VB-44223, VB-44225(72), VB-44233(72)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
PHILLIPS FISIO	820, 825	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
PHONE MATE	2970, 3950, 6950, 7050, 7150 (1 line), 7350, 7650, 7950, 8250, 8450	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
PICTURETEL	SPH1	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
PINGTEL	IP Softphone Instant Expressa(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA55	N/A
			DA60	N/A
PKS	516, 616	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
PLANT EQUIPMENT	Desk Consoles	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	2
			M22	2
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	2
		S11	None Required	4
	Electro Key Desk Consoles, ElectroKey Panel Mount	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Panel Mount, Standard 1A2 Consoles(52)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
	Vesta(90)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
PLANTRONICS	CA10	DuoPro H151N, DuoPro H161N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Mirage H41, Mirage H41N, StarSet H31N, Supra H51, Supra H51N, Supra H51NS, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	CS10, CT10	M110, M114, M170, M175C, M205, M210, M210c, M214c, M214i, M220, M220C, M40, M40Orange, M43Orange, M60, MX100, MX200 Black, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Tan	None Required	N/A
	CT11, CT12(91)	M210c, M214c, M220C	None Required	N/A
POLYCOM	Sound Point IP 300(92), Sound Point IP 301(92), Sound Point IP 430(92), Sound Point IP 500(92), Sound Point IP 501(92), Sound Point IP 600(92), Sound Point IP 601(92), Sound Point Pro(92)	CS10	None Required	B
		CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
POSITRON	301, 302, 304, 304S, 400L Turret	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			CA10	B
			MX10	1
		S11	None Required	4
PREMIER TELECOM PRODUCTS	11, 1A3 Speakerphone Set: NC612, 1A3 Standard Set: NC612, 21, 41, 6, 6/12, E-Set Single Line, ESL1 Single Line, ESP 12 BTN(72), ESP 12 Button(72), ESP 1224, ESP 24 BTN(72), ESP 24 Button(72), ESP 2460, ESP 612, ESP 8 button(72), ESP DX, Executive DKT(72), SLS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10	B
			MX10	5
	1648, 308, 616	CS10	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Premier 2530, Premier 2541, Premier 2572, Premier 2575 (2 line), Premier 8DEVT, Premier Electronic, Premier Keysets, Premier LCD	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
PRESTIGE	PR-140, PR-150	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
QUALCOMM	1960, 2760, 860	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Qualcomm Adapter	N/A
RADIO SHACK	1201/1202, Duofone System 402	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	404, 405, 406, 409, 410, 411, 412, 43-375A, 43-737A, Duofone 195, Duofone 196 (2 line), Duofone System (2 line), ET-170, ET-175, ET-180 (2 line), ET-181 (2 line), ET-182 (2 line), ET-191 (2 line), ET-192, ET-193 (2 line), ET-600, System 205, System 206 (2 line), TAD-140, TAD-145, TAD-146, TAD-160, TAD-169, TAD-170, TAD-171, TAD-175, TAD-185, TAD-202, TAD-205, TAD-252, TAD_203	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	TAD-242	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
RAULAND	TC4204	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	TC4211	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
RCA	25202RE3(94), 25403-04, 25403RE3, 25404RE3, 25413RE3, 25414RE3, 25415RE3	CS10	None Required	B
		CS50, CS55, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20 CA10 MX10	1 B 5
RECORD A CALL	2140	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	CA10 MX10	B 5
REDCOM LABORATORIES INC	Operators Console, Vodas, Vodas-K	CS10	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
RING MEDICAL	Operator Panel	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
ROCKWELL-COLLINS	Agent Consoles	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Galaxy Agent Console, Galaxy Enhanced Agent Console, Galaxy ProView, Spectrum SpectraSet Convergence, Spectrum SpectraView 1, Spectrum SpectraView 2	Generic Headset for Product Finder	None Required	N/A
ROLLA ELECTRONICS	Agent Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
ROLM	120EH, 120H (61100), 240EH, 240H (62100), 400EH, 400H (64100A), 400H (64100B), RP120H, RP240H, RP400H, RP400HD2	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			P10H	N/A
		S11	None Required	4
	240 (62000), 312, 400 (64000), 9208, 9224, 9225, 9765(96), Cedar, Juniper I, Juniper II, RP120, RP240, Redwood: 120 (61000), Rolmphone RP244PC	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	51001A, 87090A, 9755 ATC, Attendant Console: VXCBX-7900	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	612(95), 624(95)	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
			CA10 MX10 P10	B 5 N/A
	ETS 100, ETS 100A, Flashphone, Series 2500	S11 CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required None Required	4 B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	ETS 200	S11	None Required	4
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	ETS 300	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
SAMSUNG	120MX(97)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	N/A
			M22	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	1224(72), 612(72)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	408(72), 56EX(72), 812(72), 816+(72)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	C417, SCH-a940, SCH-a970, SCH-a990, SCH-i730	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
	iDCS 28D(2)	CS10	None Required	2
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	5
		S11	None Required	4
	LCD 24 BTN(2), ProStar DCSCCD(2)	CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
		S11	None Required	4
	PPC-6600, PPC-6601, PPC-6700	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
			None Required	
			None Required	N/A
	SCH-2000, SCH-2010, SCH-2510, SCH-3500, SCH-3510, SCH-400, SCH-4010, SCH-411, SCH-6100, SCH-8100, SCH-850, SCH-8500, SCH-A310, SCH-A610, SCH-A670, SCH-A860, SCH-N100, SCH-N150, SCH-N370, SCH-T300, SGH-S100, SGH-V100, SPH-1300, SPH-A250, SPH-A500, SPH-A520, SPH-A530, SPH-A540, SPH-A650, SPH-A660, SPH-I330, SPH-M100, SPH-N170, SPH-N200, SPH-N240, SPH-N350, SPH-S100, SPH-T100	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	SCH-A790, SGH-C207, SGH-C225, SGH-D415, SGH-E105, SGH-E715, SGH-P107, SGH-X105, SGH-X426, SGH-X427, SGH-X475, SGH-s307	MX153-SG3	None Required	N/A
	SCH-a950	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M210c, M214c, M215, M220, M220C, M2500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500C, MX505 Black, MX505 Tan, MX510-X1, MX510-X1 Black, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
			None Required	
	SCH-I600, SCH-i600, SGH-S105, SGH-V200, SGH-V205, SGH-V206	MX153-SG2	None Required	N/A
	SGH-d307, SGH-d500	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer330, Explorer340, Explorer350, M2500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	SGH-D347, SGH-D407	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Pulsar590, Pulsar590E, Voyager510, Voyager510USB	None Required	N/A
		Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
	SGH-E316	MX153-SG4, MX256-SG4 Black	None Required	N/A
	SGH-E335	M110, M170, M175C, M205, M210, M210c, M214c, M215, M220, M220C, M2500, M40, M40Orange, M40S, M60, MX100s, MX200 Black, MX203-X1 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX256-X1 Black, MX300 Green, MX300 Pink, MX300 White, MX500C, MX505 Tan, MX510-X1	None Required	N/A
	SGH-Q105, SGH-R225, SGH-R225M	MX153-SG1	None Required	N/A
	SPH-a620	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	SPH-A670, SPH-A740, SPH-i300, SPH-i330, SPH-i500, SPH-i700	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
	SPH-A900	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
SAN/BAR	EX3100	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
			CA10 MX10	B 1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			P10	N/A
	Vision 2000	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
SANYO	1000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
			M12	
			M22	
			MX10	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	1100, AD100, AD200 (1 line), AD400 (1 line), AD500 (2 line), ADX160, ADX260 (1 line), ADX460, ADX660, MD 3030, MD3300, MD3400 (1 line), MD3500 (1 line), STN 1000, STN 1100, STN 2000, STN 2100, TAS855 (1 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361N with HL10 Lifter, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	ADX360 (1 line)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361N with HL10 Lifter, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	MM-5600, MM-7400, MM-8300, PM8200, RL2000, RL2500, RL4920, RL7300, SCP-4500, SCP-4700, SCP-4800, SCP-4900, SCP-5000, SCP-5150, SCP-5300, SCP-5400, SCP-5500, SCP-6000, SCP-6200, SCP-7200, SCP-7300, VM4500	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	SCP-3000	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	SCP-350, SCP-4000, SCP-6400, SCP-8100	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	SCP-6600, SCP-6600 (Katana)	Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M170, M175C, M205, M210, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100s, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX505 Tan, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
	SCP-8200	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
SCITEC	2510D(1), 2510D-e(1), 2554-W(1)	CS10	None Required	B
		CS50, CS55, CS70, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Ageis 10, Ageis 3, Ageis 3S, Ageis 5, Ageis 5S, Ageis 6003S, Ageis 6005S, Ageis 600T, Ageis 600TP, Ageis 6010S, Ageis P, Ageis PS, Ageis T, Ageis T5, Ageis TP, HDST-12, SCT-7001, SCT-7002, SCT-7003, Scitec 5S-c	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	Ageis 10S	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	Ageis 600ID5	S11	None Required	4
		CS10	None Required	2
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	Ageis 600T5	CS10	None Required	2
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
SCOTT TECHNOLOGIES	Solo, Solo Plus, Stars & Westars	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	CA10 MX10	B 1
SEARS	34677, 34692, 34771, SR1000, SR2000	CS10	None Required	4
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
SENDO	Z100	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
SHARED RESOURCES EXCHANGE	100, 200, 200S, 400	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	SRX 1000	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
	Vision Phone	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
SHARP	UX1000, UX101, UX103, UX172, UX254, UX265	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		M22	5	
		A20	1	
			DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10
			MX10	5
		S11	None Required	4
	Z-800	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
SHORETEL	ShorePhone 100 SoftPhone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
		DA60	N/A	
	ShorePhone IP 100(98)	.Audio 910, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N, Voyager510USB	None Required	N/A
	CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	ShorePhone IP 110(98)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	
			None Required	1
			M12	5
	ShorePhone IP 210(98)	CS50, CS55, CS70, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	
			None Required	1
			M12	5
	ShorePhone IP 212K(98)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	
			None Required	1
			M22	5
	ShorePhone IP 230(98)	CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	
			None Required	1
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	ShorePhone IP 530(98)	CS50, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL	None Required	1
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
			M12	
			M22	
			None Required	
	ShorePhone IP 560(98)	CS50 with HL10 Lifter, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	M22	5
			None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
SIEMENS	12 Button, 1224 Proprietary Set, 16 Button, 2100, 2101 (1 line), 2110, 2111 (1 line), 2210, 2212 (1 line), 2220 (2 line), 24 Button, 34 Button EKT, 4080 Proprietary Set, 816 Proprietary Set, CA or HA option module, Entry, HA+ option module, Optiset E	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
			None Required	4
			None Required	N/A
			S11	After Market Adapter
	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100			
	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Siemens Adapter	N/A	
	C61			

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	Console, Console: X5051-A878	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10H	N/A
	Gigaset 2400(99)	M210c, M214c, M220C, Supra H51NS	None Required	N/A
	OpenStage 20	CS10, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
			CA10 MX10	B 5
	OpenStage 40	CS10, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
			CA10 MX10	B 5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	OpenStage 60, OpenStage 80	CS10, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		Discovery640, Discovery640E, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N, Pulsar590, Pulsar590E, Voyager510	None Required	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	5
	OptiClient 130(5), OptiClient 130 Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
	optiPoint 400 Standard	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	optiPoint 410 Advance(101), optiPoint 420 Advance(101), optiPoint 500 Advance(101)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	optiPoint 410 Economy +, optiPoint 420 Economy +, optiPoint 600 Office(102)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		S11	None Required	4
	optiPoint 410 Standard(102), optiPoint 420 Standard(102), optiPoint 500 Basic(102), optiPoint 500 Standard(102), optiPoint 500 Standard SL(102)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
			CA10 MX10	B 5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	optiPoint 500 Entry(103)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
		S11	None Required	4
	Optiset E Advance(100), Optiset E Advance Conference(100), Optiset E Advance Plus(100), Optiset E Basic, Optiset E Entry, Optiset E Standard	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	S45, S56	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+, mx100	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
	S55	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Siemens Adapter	N/A
	Set 10, Set 30	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	Standard	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
			None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	SX66	S11 Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M170, M175C, M205, M210, M214i, M220, M2500, M40, M40Orange, M43Orange, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required None Required	4 N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
			None Required	
SIPURA	841 v 3.1.1a(104)	CS10 CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required None Required	B 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
			CA10 MX10	B 5
		S11	None Required	4
SKYPE	IP Softphone version 2.5(5)	.Audio 910, CS50USB, Voyager510USB Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	None Required DA40	N/A N/A
			DA55 DA60	N/A N/A
SONITROL	AB1236	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Sonitel 100, Telic T16	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
SONY	C413S	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
	CM-B1200, CM-B2200, CM-B3200, CM-B3300, CM-M1300, CM-S1100, CM-S2100, CM-Z100, CM-Z300	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Sony Adapter	N/A
	CM-SB200, CM-ZS300, SE-T206	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	ITA4000, ITA500, ITA600, ITA650, ITA850, ITB2, ITB3, ITB5, ITD100, ITD150, ITD250, ITM10	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
	S11	CA10 MX10	B 5	
SONY ERICSSON	J5, J7, J70, T206, T61LX, Z7	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	K700i, Z520a	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	K750i, Z600	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
		M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A
	P800, P900, P910, P910a, S700i, S710a, T39, T610, T616, T630, T637, T68i, W800	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart	None Required	N/A
			None Required	
	R520M, T39M, T68, T68M	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M2500, M3000, M3500, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+	None Required	N/A
	T226	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
			Sony/Ericsson Adapter	N/A
	T300, T306	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A
	T310	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
	T608, T61D	Discovery640, Discovery640E, Discovery640X, Discovery645, Discovery655, Discovery655 AudioIQ, Discovery665, Explorer320, Explorer320 White, Explorer330, Explorer340, Explorer350, M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M2500, M3000, M3500, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, Pulsar590, Pulsar590E, Voyager510, Voyager510 Pre-WindSmart, Voyager510S, Voyager510SL, Voyager510SL+, mx100	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	T62u	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
		M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
	Z200	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	Ericsson Adapter	N/A
		M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	Z500	M110, M114, M130, M135, M145 - DISCONTINUED, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500i, MX505 Black, MX505 Tan, MX510-M1 Black, MX510-N1 Black, MX510-N3 Black, MX510-X1 Black, mx100	After Market Adapter	N/A
			Ericsson Adapter	N/A
SOUND DESIGN	Telephone 7255, Telephone 7267, Telephone 7278 (2 line), Telephone 7373, Telephone 7444	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
SOUTHERN TELECOM	Caller ID, Classey 3100, SLT100 (1 line), SLT200 (2 line), SLT300 (3 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	DP651	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
SOUTHWESTERN BELL	Concord 10, Concord 16, FA1200, FA1600, FA1625, FA1900, FA460, FA955, FD8000, FD8100 (2 line), FM 500, FM 500X, FM 550, FM1550, FM2555, FM3500, FM3550, FM825, FM850, FM875, FS800, FS9000, FS900B Attendant Console, FT-1, FT-2, FT-3, FT-4, FT383, FT412 (4 line), Proprietary Console w/ DSS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Coronet Set: HFS	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Coronet Set: SS, FS900	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	FC10, FC151, FC155, FC2500, FC2505, FC2515, FC7, FC8, FC9, F1125	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
		CS10	None Required	B
		CS50, CS70, S12, S20, Voyager510S, Voyager510S Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Focus Sets, Matrix Set: 24TDX, Matrix Set: 36TDX	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	FT300, FT305, FT325, FT350, FT400, FT425, FT483	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
SPECTRALINK	Link WTS, Net Link, WLAN 2210 Wireless IP Handset, WLAN 2211 Wireless IP Handset	PTH100, PTH200	None Required	N/A
SPECTRA MERCHANDISING	DP-7	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
SPRINT PCS	Denso Touchpoint TP100, Neo Point 1000, Touchpoint 1100, Touchpoint 120, Touchpoint 2000, Touchpoint 2110, Touchpoint 2200, Touchpoint 3000, Touchpoint 5200, Touchpoint LXC-D100	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	Protoge 475716, Protoge 475718	Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	SP 201, SP 202, SP 203, SP 601, SP 602, SP 603, SP 702, SP 705, SP 802, SP 803, SP 804, SP 9417-CW, SP9516-CW	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Touchpoint 1000	M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
STARTEL	2800 w/80286 processor, 5700	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
STC TELECOM CORP	Solitaire Plus Five	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
STROMBERG CARLSON	2500 DM	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	6528, 6530	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	6532, 6534	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
SUN MOON STAR GROUP	DKTS DK-80, EKTS KT-10II, EKTS KT-48, Feature Phone ST-30	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
SWYX	Swyxware(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
TADIRAN	DKT, DST, EKT, Emerald Ice 28 button Deluxe	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	EKT 321	S11	None Required	4
		CS10, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	VDK	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			MX10	5
		S11	None Required	4
		S12, S20	None Required	1
TALKSWITCH	TS600	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
TALTEK	747VA	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
T.E.C	3000 Turret	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TECHNICOM INTERNATIONAL INC	616 Set, 71325: Custom Calling Set, Basic Plus: 71350, CTX Managerial Set, FPI Call Com	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Businesscom I, Businesscom II	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TEC TEL	TSG 2500	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TEKNEKRON INFOSWITCH INC	3970: Attendant Console, System Console & TSR, TTS (431-6122-105)	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	6600	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
	ACD Console 3901(106)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	ACD Console 3911(106), Key Set 24/94 (94-3913-001)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
TELAMON-TECOM	T Com	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Telamon Set	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
TELECO	UST1010DSD	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
TELECOM TECHNOLOGY	DDS Sets	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	None Required	4
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	MX10	1
		S11, S12	None Required	1
		TELECOM U. S. A.	15008, 15110, 15111, 15112, 15113, 15117, 15118, 15210, 15211, 15212, 15213, 15217, 15218, 15310, 15311, 15312, 15313, 15317, 15318, 15517, 15518, 15617, 15618, 15717, 15718	CS10

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	38602, 38603, 38604, 616012, 616013, BCX Sets	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
	60007, 60010, 60011, 60085, 60086	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Challenger: 38601	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
TELEDEX	B100, B120, B120ID, B150D, B220, B250D, BASIC+, BTX4510, BTX4550, BTX4750, Diamond, Diamond+3, L2, ML-2, ML-P2, MLC-2, MLC-P2, MLT(107), MLT-C(107), MLT-E(107), MLT-S(107), P2, PL2, SL, SL-2, SLT-1(107), SLT-2	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	IP 120, IP 250D	CS10	None Required	2
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	2
			MX10	5
		S11	None Required	4
TELEDIAL	TDP-1000-1	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	TDP-1000-1SP	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	TDP-100-2, TDP-100-4A, TDP-1000-10, TDP-1000-12, TDP-1000-13, TDP-1000-14, TDP-1000-14FP, TDP-1000-18, TDP-1000-19, TDP-1000-25, TDP-1000-26, TDP-1000-3A, TDP-1000-5/6, TDP-1000-5A, TDP-1000-6, TDP-1000-7, TDP-1000-8, TDP-1000-8PB, TDP-2000-1, TDP-2000-1SP, TDP-3000-1, TDP-5000-1, TDP-6000-1, TDP-6000-3	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	TDP-4000, Triumph	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
TELEFONY & ELECTRONICS OF AMERICA	1024, 408, 812	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
TELEMATRIX	100(61)	S11	None Required	4	
		CS10	None Required	B	
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1	
		CA10	B		
		MX10	1		
		S11	None Required	4	
		136043	CS10	None Required	B
			CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		M12	5	
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N		M22 A20	5 1	
	CA10		B		

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
	16053	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	16063, 16067, 162043 (1 line), 166043, 2500 Premium, 2700 MW (1 line), 272173, 36212, 571546, 576046, 576048 (1 line), 576052 (2 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	200(61), 205(61), 208(61), 250(61), 300(61), 305(61), 308(61), 400 (2 line)(61), 500 (3 line)(61), 508(61), 5100 (3 line)(61), 550 (5 line)(61), 576247	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	DC550	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
	DC640, LP550, SP200, SP300, SP400, SP750	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
	SP100	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	SP550	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	CA10 None Required	B N/A
		S11	None Required M12 M22 MX10	4
TELEPATH	Amtron 416	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	1 1
		S11	CA10 MX10 None Required	B 1 4
		Talkback Phone	CS10	None Required
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TELEQUEST	433-SF, Grand Prix, Telequest 2600	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
TELE RESOURCES	Proprietary Set	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	System 150: Proprietary Sets.	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings	
TELESCAN	ACD Set	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A	
		Earth Net	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1	
			M22	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1	
			CA10	B	
			MX10	1	
			S11	None Required	4
	TEL PLUS	16 Button, 24 Button, 816 , 4080 Proprietary Set, HCM Sets: 12 Button	CS10	None Required	B
CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart			None Required	1	
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5	
			M22	5	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Proprietary Set	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TELRAD	20 Button, 24 Button, 32 Button, 73430-0000, 73430-0001, 83050-0000, 83050-0100, BA1(108), BA2(108), EX1(108), EX2(108), EXO(108), SD1(108), SD2(108)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	73-00-1000, 73-140, 79-200-0007, Avanti 3000, Avanti 3015, Avanti 3020, Avanti 3025	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	73-00-2000	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	79-520-000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
TIE	1030, 10832(109), 10864(109), 10T, 1236, 12X24(109), 15017(110), 15117(110), 15118(110), 15217(110), 15218(110), 15317(110), 15318(110), 15517(110), 15718(110), 2260, 250B, 32X64(109), 3X8(109), 6X16(109), 86050, AR/BR, AT/BT, Delphi 4, E 100, E 100-C, E 80, E200/201, E300 CR, E300 CT, EK2260 Executive Display, EK308T, EK516T, Execufone 2DX, L200-A/B, MXL64E(109), Proprietary Set: 83011, S200/201, T 200-AO, T 200-AR, T 200-AT, T 200-BR, T 200-BT, T1030-2, T1030-3, T1060-2, T1060-3, T1060-4, T1220-2, T1220-3, T1220-4, TC-12, TC-22, TC8: Proprietary Set, TC8DS, W-820	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	15518(110), 15617(110), 15618(110), 15717(110)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	20 Button Module, 20150, 20160, 20161, 20162, 20180, 20181, 20182, 60007, 60010, 60011, 60015, 60016, 60020, 60021, 60025, 60026, 60030, 60031, 60080, 60081, 60082, 60083, 60085, 60086, 86057, 86063: Multibutton, 86067, 86072, 86073, 86074, 86079, 86082, 86089, 88155 10 Button Set, 88160, 88161, 88163, 88176, 88363, 89050, 89053, 89054, 89055, 89058, 89060, 89061, 89758, 89759, 89760, 89761, 89762, 89763, 89764, 89765, Feature Phone: 20 Button	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
	28 Button: 87730, 61650, 61655, 72002, 85610 (2 line), 87731, 88661, 88662, 88663, 9-Button: 87732, AP2002, Attendant Console, Custom Calling Set: 71325, EK2464, Executive Display, M-Group Set: Multi Line, M-Set, M-Set: 87733, Multi-button, Paragon EK616, Proprietary Set, VDS Attendant Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
			CA10 MX10	B 5
	85100 (1 line)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	86060, 86061, 86070, 86071, 86080, 86098	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	86078, 86088	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	Feature Phone: 28 Button	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	M1000 Console, TX Console	S11	None Required	4
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
TIETOENATOR TELECOM & MEDIA	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
TMC	SOHO-M400	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
TMG	601-A1, 650-A1, 650-P	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1	
		M22	1	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
TONE COMMANDER SYSTEMS	1000, 1030, 524, 532, CTX10, CTX10 Plus Console, CTX20, CTX5, CentraCom 524, CentraCom CPC600, CentraCom CTX-200, Innovator II Console	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10H	N/A
		S11	None Required	4
	1560	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	2260D, 40D120, 6210T, 6210U, 6220T, 6220U	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	8610, 8620, 8810	CS10	None Required	B
		CS50, CS55, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
			P10H	
	CentraCom 30e-120	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	CTX20 Plus Console	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10H	N/A
		S11	None Required	4
TOSHIBA	4700, 6000N, EKT single line, HDSS6560, Strata CIX	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
	8245G9, AATT102, Attendant Console, DATT102, EKT 2101, EKT 2103, EKT 2104, EKT 2105, EKT 2106, EKT 2201, EKT 2202, EKT 2203, EKT 2204, EKT 2205, EKT 3101, EKT 3102, EKT 3600, EKT 6010(61), EKT 6015(61), EKT 6020(61), EKT 6025(61), EKT2102, EKT6020(61), MKSU 202, MKSU 502, TSX-14, TSX-16, Toshiba Com	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Console Perception	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	D4000 ACD Console(111)	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
		S11	None Required	4
			CA10	
			M12	
			M22	
	DKT2001	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	DKT2010(111), DKT2010SD(111), DKT2020S(111)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	DKT2010H(111), DKT2020SD(111), EKT 6510H(111), EKT 6510S(111), EKT 6520H(111), EKT 6520SD(111), EKT 7510H(111)	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	DKT3001(111), DKT3020SD(111)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		S11	None Required	4
			M12	
			M22	
	DKT3010S(111), DKT3014SDL(111)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	MX10	5
			None Required	N/A
		S11	None Required	4
			CA10	
			M12	
			M22	
	DKT3020S(111)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81	None Required	N/A
		S11	None Required M12 M22	4
	MDSS302	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	1 no batteries
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10 MX10	B 1 no batteries
	TCP-1000, TCP-900	S11	None Required	4
		M110, M114, M124 - DISCONTINUED, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan, mx100	None Required	N/A
	TSX-18	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	N/A
			M22	N/A
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	VM4050	M110, M114, M130, M135, M170, M175C, M205, M210, M214i, M220, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
TRILLIUM TELEPHONE SYSTEMS	1032, 2064, 306, 612, Panther II: 1032, Panther II: 2064, Panther II: 306, Panther II: 612, Talkto 1000 (1 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	Talkto 1032, Talkto 109, Talkto 308, Talkto 616	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	Talkto 208	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
TT SYSTEMS	200, 205 (ST-2), 208 (ST-4), 210, 410, 412 (ST-4), Altair I, Altair II (1 line), Altair III (2 line), Regal (1line), Regal II (2 line), Sim Tel III (2 line), SimTel (2 line), SimTel 100 (1 line), SimTel II, SimTel IV, SimTel V (4 line), SimTel(4 line)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10	B 5
		S11	None Required	4
UNICOM	110, 125	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
UNIDEN	1010, 1015, 1020, 1030, 1040, 8050, XE20, XE30, XE40, XE70	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	1050	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	420, 450	Polaris DuoPro P151, Polaris DuoPro P151N, Polaris DuoPro P161, Polaris DuoPro P161N, Polaris DuoPro P171, Polaris DuoPro P171N, Polaris DuoPro P181, Polaris DuoPro P181N, Polaris DuoSet P141, Polaris DuoSet P141N, Polaris Encore P101, Polaris Encore P101N, Polaris Encore P91, Polaris Encore P91N, Polaris Mirage P41, Polaris StarSet P31, Polaris Supra P51, Polaris Supra P51N, Polaris Supra P61, Polaris Supra P61N, Polaris SupraPlus P251, Polaris SupraPlus P251N, Polaris SupraPlus P261, Polaris SupraPlus P261N, Polaris SupraPlus SL P351, Polaris SupraPlus SL P351N, Polaris SupraPlus SL P361, Polaris SupraPlus SL P361N, Polaris TriStar P81, Polaris TriStar P81N	None Required	N/A
UNISONIC	6430, 6431, 6434, 9127, 9524	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
UNITECH	AFF20	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
UNIVERSAL TELECOM SERVICE	T126(52), T126-C(52)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
			P10	N/A
		S11	None Required	4
USX TELECENTERS	1010-BLS(61), 1010-BTS(61), 1010-SPK(61), 1020-BTS(61), 1020-LCD(61), 1020-SPK(61)	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	1240 PBX Console	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
		S12, S20	None Required	1
	EKT-O-Button	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
VALCOM	V4500, V4600	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
V-BAND SYSTEMS	VIAX Desk Phone, VK-70240, VK-7030, VK-7060, VK-7090, Valent 10, Valent 20, Valent 30	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	VK-6030, VK-6060, VK-6090, VK-6150, VK6120	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
			A20	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10	B
			MX10	1
		S11	None Required	4
VERTICAL NETWORKS	VN012DDS-G 12-Button, VN024DDS-G 24-Button, VN064DDS-G 64-Button, VN08D-G 8-Button, VN08DDS-G 8-Button	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
VIKING	KT8	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
VOAD SYSTEMS	Keybard Phone	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
VODAVI TECHNOLOGIES	1224 PROPRIETARY SETS, 308 PROPRIETARY SETS	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	1428 DIGITAL SETS, 2448 PROPRIETARY SETS, 2856 DIGITAL SETS, 4080 PROPRIETARY SETS, 612 PROPRIETARY SETS, 816 PROPRIETARY SETS, STARPLUS 2601, STARPLUS 2602, STARPLUS 2603, STARPLUS 2604, STARPLUS 2605, STARPLUS 2606	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
	1648 PROPRIETARY SETS, 3264 PROPRIETARY SETS, STARPLUS 2500, STARPLUS 2501, STARPLUS 2554	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	SDS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	1
	STARPLUS 4500	S11	None Required	4
		CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
VOIP SOFTPHONES	Alcatel PIMPhony(5), Altigen Main Sequence(5), Avaya IP softphone(5), Cisco IP Communicator(5), Cisco IP softphone(5), Comdial EP200 Multimedia Endpoint(5), CounterPath(5), DeTeWe (WinFinity) OpenPhone 65 IPC(5), EADS(5), Elmeg, FEC SIP-Serv(5), Etrali, Etradeal Vision(5), Harpax VOIspeed(5), IP Blue(5), Inter-tel 8601 IP(5), Lucent X-Ten(5), Main Sequence(5), Myjabber AE(5), NEC(5), OTHER(5), Pingtel Instant Xpressa(5), Siemens OptiClient 130(5), Skype(5), Swyx(5), TietoEnator Telecom & Media (KiTel)(5), Vonage X-Ten(5), Wicom(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
	Cisco IP softphone (112)	.Audio 500 USB, .Audio 510 USB, .Audio 550 DSP, .Audio 910, CS50USB, DSP-400, M214i, Voyager510USB	None Required	N/A

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA55	N/A
	ShoreTel(5)	.Audio 910, Voyager510USB	DA60 None Required	N/A N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
	Skype (112)	.Audio 500 USB, .Audio 510 USB, .Audio 550 DSP, .Audio 910, CS50USB, DSP-400, M214i, Voyager510USB	DA55 DA60 None Required	N/A N/A N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55 DA60	N/A N/A
VONAGE	IP Softphone(5)	.Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
	V Phone	M110, M170, M175C, M205, M210, M210c, M214c, M214i, M215, M220, M40, M40Orange, M60, MX200 Black, MX250 Black, MX250 White, MX300 Green, MX300 Pink, MX300 White, MX500C, MX500i, MX505 Black, MX505 Tan	DA55 DA60 None Required	N/A N/A N/A
VTECH CORDLESS	20-2431, 20-2481, 2406, 2418, 2426, 2428, 2434, 2451, 2456, 2458, 2528, 2551, 2558, 2651, 2656, 40-2421, 5831, 5881	M210c, M214c, M220C	None Required	N/A
	9127, 9152, 9162	M110, M114, M130, M135, M170, M175C, M205, M210, M210c, M214c, M214i, M220, M220C, M40, M40Orange, M40S, M43Orange, M43s, M60, MX100, MX100s, MX150, MX200 Black, MX203S-X1S Black, MX203S-X1S White, MX250 Black, MX250 White, MX300 White, MX500i, MX505 Tan	None Required	N/A
WALKER	CLARITY	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
WANG INDUSTRIES	DIGITAL WORK STATION, SL 2500	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
WEBCOR ELECTRONICS	828, 830	CS10	None Required	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
WESCOM	580 CONSOLE	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	80/5 ACD CONSOLE	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
WICOM	IP Softphone(5)	.Audio 550 DSP, .Audio 910, CS50USB, Voyager510USB	None Required	N/A
		Encore H101, Encore H101N, Encore H91, Encore H91N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	DA40	N/A
			DA55	N/A
			DA60	N/A
WIDEBAND TELEPHONES	Avaya 9620, Avaya 9630	ABT-35, AWH-55, AWH-75, CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, SupraPlus Wireless CS351, SupraPlus Wireless CS351N, SupraPlus Wireless CS361, SupraPlus Wireless CS361N, Voyager510S, Voyager510SL, Voyager510SL+	None Required	3
		LKA10	None Required	B
		Supra Elite Wideband AW450N, Supra Elite Wideband AW460N, SupraPlus HW251N, SupraPlus HW261N	HIS Cord	N/A
WIN COMMUNICATIONS	100-D, 16-D, 200-D, DSS/BLF CONSOLE, MARATHON EKT, MK1000, POET 1836, POET 3060, POET 612, POET EXEC	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
	S11	None Required	4	

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
	RELIANT 16, RELIANT 32, RELIANT 50, RELIANT 96, RELIANT 8	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
WOLVERINE	SERIES 4000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			MX10	5
		S11	None Required	4
	SERIES 4000+, SERIES 4000A, SERIES 4000A+, SERIES 5000	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
WYSE	TERMINAL 60	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4
XTEL	PERFECT 10	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	STATUS	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
ZAISAN	ES 1	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
	ES 2	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	1
			M22	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	1
		S11	None Required	4
ZETRON	4000 Series(52)	Generic Headset for Product Finder	None Required	N/A
ZTEL	ATTENDANT CONSOLE	DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	P10	N/A
	Z12, Z28, Z4	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, CS70, CS70 with HL10 Lifter, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510S Pre-WindSmart, Voyager510SL, Voyager510SL Pre-WindSmart, Voyager510SL+, Voyager510SL+ Pre-WindSmart	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
			M22	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	A20	1
			CA10	B
			MX10	5
		S11	None Required	4

Manufacturer	Models	Headsets and Systems	Amplifiers and Adapters	Switch Settings
ZULTYS	ZIP 2, ZIP 2x1, ZIP 2x2, ZIP 4x4, ZIP 4x5	CS10	None Required	B
		CS50, CS50 with HL10 Lifter, CS55, CS55 with HL10 Lifter, S11, S12, S20, SupraPlus Wireless CS351, SupraPlus Wireless CS351 with HL10 Lifter, SupraPlus Wireless CS351N, SupraPlus Wireless CS351N with HL10 Lifter, SupraPlus Wireless CS361, SupraPlus Wireless CS361 with HL10 Lifter, SupraPlus Wireless CS361N, SupraPlus Wireless CS361N with HL10 Lifter, Voyager510S, Voyager510SL, Voyager510SL+	None Required	1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Freehand H132N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M12	5
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	M22 A20	5 1
		DuoPro H151, DuoPro H151N, DuoPro H161, DuoPro H161N, DuoPro H171, DuoPro H171N, DuoPro H181, DuoPro H181N, DuoSet H141, DuoSet H141N, Encore H101, Encore H101N, Encore H91, Encore H91N, Freehand H131N, Mirage H41, Mirage H41N, StarSet H31, StarSet H31N, Supra H51, Supra H51N, Supra H61, Supra H61N, SupraPlus H251, SupraPlus H251N, SupraPlus H261, SupraPlus H261N, SupraPlus SL H351, SupraPlus SL H351N, SupraPlus SL H361, SupraPlus SL H361N, TriStar H81, TriStar H81N	CA10 MX10	B 5

Appendix - Phone Notes

Id	Phone Notes
1	The HL10 handset lifter is not compatible with this phone due to the phone's curved shape. However, the HL1 handset lifter is compatible.
2	The HL10 handset lifter is not compatible with this phone. However, the HL1 handset lifter is compatible.
3	Unfortunately, the HL10 and HL1 handset lifters are not compatible with this phone model.
4	This telephone may need to be programmed for headset use. Please contact your telephone manufacturer for programming details.
5	Please note that Plantronics' PersonoCall software must be installed in order to use the call answer/end feature of a Bluetooth or wireless headset. This software is not compatible with Macintosh computers.
6	Please note that a QD to modular cable (PN 27190-01) can be used in place of an amplifier to make this phone compatible with H-series headsets.
7	Please note that a QD to modular cable (PN 27190-01) can be used in place of an amplifier to make this phone compatible with H-series headsets. Please call our Technical Support for more details @ 1-800-544-4660 x5538
8	If System has a non-amplified headset jack interface, a modified P10 amplifier model P10H is required. Contact AmTelco at 800-356-9148 to make this determination.
9	Please refer to the manufacturer listed as "AVAYA" for compatibility information for this particular phone model.
10	The HL10 handset lifter is not compatible with this phone due to the phone's ring tones. However, the HL1 handset lifter is compatible.
11	The M22 will require a special Tele-Infonet adapter cord. Please contact IDS @ 336-299-4409 to purchase the adapter cord.
12	This phone has 2 ports. Plantronics headsets will plug into the smaller port.
13	No Headset port on this phone. All Cordless and wireless unit including the LKA10 need a lifter.
14	This phone model has a designated headset port; it DOES NOT have an EU24 port. To connect a headset directly, use an HIC cord in the headset port. The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into headset port. Uses external ring detectors. The LKA10 dialing features will not work with an IP switch. Lifter is required for all non-Avaya cordless/wireless headsets.
15	This phone model has headset port and DOES NOT have a EU24 port. The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into the headset port (no lifter required). To connect a headset directly, use an HIC cord in the headset port. A lifter is required for all non-Avaya cordless/wireless headsets.
16	This phone model has headset and EU24 ports. The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into the EU24 port (no lifter required). To connect a headset directly, use an HIC cord in the headset port. A lifter is required for all non-Avaya cordless/wireless headsets.
17	This phone model has headset and EU24 ports. The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into the EU24 port (no lifter required). To connect a headset directly, use an HIC cord in the headset port. Phone's firmware version must be 4.0 or above to use MIP. Phone's firmware version must be 4.0 or above for hook switch control and ring detection with wireless headsets. A lifter is required for all non-Avaya cordless/wireless headsets.

Id	Phone Notes
18	<p>A PJ327 adapter P/N 18709-1 can be used to connect a modular amplifier.</p> <p>Please note that the HL10 handset lifter and the HL1 handset lifter are not compatible with this phone.</p>
19	<p>Please note that the HL10 handset lifter and the HL1 handset lifter are not compatible with this phone.</p>
20	<p>This phone model does not have a designated headset port.</p> <p>The LKA10 dialing features will not work with an IP switch.</p> <p>Lifter is required for all cordless/wireless headsets.</p>
21	<p>This phone model has a designated headset port.</p> <p>To connect a headset directly, use an HIP cord in the headset port.</p> <p>LKA10 dialing features will not work with this phone (even with MIP).</p> <p>Lifter is required for all cordless/wireless headsets.</p>
22	<p>These phones have an ADJ port.</p> <p>The ADJ port functions the same as a EU24 port.</p> <p>Minimum Firmware v 1.8 is required to obtain remote answer & ring detection.</p> <p>HIC cord is direct connect option through headset port.</p> <p>Lifter required on all non Avaya applicable units</p> <p>LKA10 need MIP to dial.</p>
23	<p>This phone model has headset and EU24 ports.</p> <p>The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into the EU24 port (no lifter required).</p> <p>To connect a headset directly, use an HIC cord in the headset port.</p> <p>Phone's firmware version must be 1.8 or above to use MIP.</p> <p>Phone's firmware version must be 1.8 or above for hook switch control and ring detection with wireless headsets.</p> <p>A lifter is required for all non-Avaya cordless/wireless headsets.</p>
24	<p>Phone has designated headset port.</p> <p>LKA10, AWH55 & ABT-35 plugs into headset port, no lifter required.</p> <p>The AWH55/ABT-35 unit comes with an additional connection cable that goes from the AWH55/ABT-35 EU24 port to EU24 on the bottom of the phone itself to allow remote answer and ring detection. Please note **phone must be v 1.8 or above**</p> <p>If using the LKA10, there are two scenarios:</p> <ol style="list-style-type: none"> 1) If the telephone firmware is below v 1.8 the LKA10 will access hook switch control through the headset port, but there is no dial pad functionality. 2) If the telephone firmware is above v 1.8 you can use the MIP adapter with the LKA10 through the headset port to get remote answering, ringing, and dialing.

Id	Phone Notes
25	<p>These phones have a built in headset & EU24 port.</p> <p>AWH-55, AWH75, AWH450, AWH460, ABT35S, use EU24 port, No Lifter required.</p> <p>LKA10 connects through the headset port and requires the MIP to dial.</p> <p>4620SW's manufactured after Nov. 2004 use HIC cable.</p> <p>4620SW's manufactured before Nov. 2004 use HIP cable.</p> <p>The NEW phone version can be identified by two distinct physical features: The mic has only one hole (on the right side of the telephone - as opposed to two holes) The ethernet jacks face down - as opposed to the (rabbit ear) jacks with pointed directly back.</p> <p>HIC or HIP cord are the direct connect option through headset port.</p> <p>Lifter required on all non Avaya cordless and wireless units.</p>
26	<p>This phone model does not have a designated headset port.</p> <p>The LKA10 dialing features will work with a Definity switch; they will not work with an IP switch.</p> <p>Lifter required on all cordless and wireless units.</p>
27	<p>This phone model does not have a designated headset port.</p> <p>The LKA10 dialing features will not work with an IP switch.</p> <p>Lifter required on all cordless and wireless units.</p>
28	<p>This phone model does have a designated headset port.</p> <p>The LKA10, AWH-55 and ABT-35S should be installed into the headset port; they use external ring detectors.</p> <p>The LKA10 dialing features will work with a Definity switch; they will not work with an IP switch.</p> <p>To connect a headset directly, use an HIC cord in the headset port.</p> <p>Lifter required for all non-Avaya cordless and wireless headsets.</p>
29	<p>This phone model does not have a designated headset port.</p> <p>The AWH-55 and ABT-35S should be installed into the headset port; they use external ring detectors.</p> <p>The LKA10 dialing features will work on IP switch.</p> <p>To connect a headset directly, use an HIC cord in the headset port.</p> <p>Lifter required for all non-Avaya cordless and wireless headsets.</p>
30	<p>LKA10, AWH55 & ABT-35 goes into handset port. Lifter Required.</p>
31	<p>This phone model does not have an adjunct port (cannot support the SOTA/500AM).</p> <p>A lifter is required for all cordless/wireless units.</p> <p>The LKA10 dialing features will work with a Definity switch; they will not work with an IP switch.</p> <p>If you experience low volume with an LKA10, order one cable adapter kit (PN 61639-01) per phone. (This kit includes two 40287-07 cables).</p> <p>If you continue to experience low volume, add the CE125, HA40 or MHA100.</p>

Id	Phone Notes
32	<p>An adjunct port is required in order to use the SOTA/500AM.</p> <p>The AWH-54 and ABT-34 should be installed into the hand receiver port.</p> <p>The AWH-75, AWH-450, and AWH-460N should be installed into the adjunct port for switch hook control (no lifter required).</p> <p>The AWH-55+ should be installed into the adjunct port (no lifter required).</p> <p>LKA10 plugs into hand receiver port; lifter required.</p> <p>The LKA10 dialing features will work with a Definity switch; they will not work with an IP switch.</p> <p>If you experience low volume with an LKA10, order one cable adapter kit (PN 61639-01) per phone. (This kit includes two 40287-07 cables).</p> <p>If you continue to experience low volume, add the CE125, HA40 or MHA100.</p> <p>Lifter required for all non-Avaya cordless and wireless headsets.</p>
33	<p>If low receive occurs while using the LKA10, call 1-800-544-4779 for solution.</p>
34	<p>The Partner Base and 10U100 should be installed into an analog port (recommended).</p> <p>10U100 can be installed into the phone's AUX port or into the wall with a line splitter/bridging adapter.</p>
35	<p>This phone model does not have a designated headset port. Only an adjunct port.</p> <p>The adjunct port supports the corded SOTA/500AM and for the the Wireless models AWH-55+, AWH-75, AWH-450, and AWH-460N for switch hook control (no lifter required). The AWH-54 and ABT-34 should be installed into the hand receiver port; a lifter is required.</p> <p>The LKA10 dialing features will work with a Definity switch; they will not work with an IP switch.</p> <p>Lifter is required for all non-Avaya cordless/wireless headsets.</p>
36	<p>This phone model does not have a designated headset port.</p> <p>An adjunct port is required in order to use the SOTA/500AM.</p> <p>The AWH-54 and ABT-34 should be installed into the hand receiver port.</p> <p>These headsets use external ring detection.</p> <p>The AWH-75, AWH-450, and AWH-460N should be installed into the adjunct port for switch hook control (no lifter required).</p> <p>The AWH-55 should be installed into the adjunct port (no lifter required).</p> <p>LKA10 dialing features will not work with this phone.</p> <p>Lifter is required for all non-Avaya cordless/wireless headsets.</p>
37	<p>This phone model has a designated headset port.</p> <p>AWH-55 should be installed through headset port; cable (PN 74256-01) required.</p> <p>AWH55+ comes packaged with 74256-01 cable.</p> <p>A lifter is required for all non-Avaya wireless headsets.</p> <p>To connect a headset directly, use an HIS cord in the headset port.</p>
38	<p>Vista M12 amplifiers manufactured before September, 2005 work on switch setting 6 with no cables.</p> <p>Vista M12 amplifiers manufactured after September, 2005 require a cable (PN 40287-06) on switch setting 5.</p> <p>Please note that the HL10 handset lifter and the HL1 handset lifter are not compatible with this phone.</p> <p>A PJ327 adapter p/n 18709-01 can be used to connect a modular amplifier.</p>

Id	Phone Notes
39	<p>No amplifier is required with this phone.</p> <p>This phone is packaged with a QD to male modular cable (PN 26716-01) to directly connect H-series headsets.</p> <p>Please note that the HL10 handset lifter and the HL1 handset lifter are not compatible with this phone.</p> <p>A PJ327 adapter p/n 18709-01 can be used to connect a modular amplifier.</p> <p>Vista M12 amplifiers manufactured before September, 2005 work on switch setting 6 with no cables.</p> <p>Vista M12 amplifiers manufactured after September, 2005 require a cable (PN 40287-06) on switch setting 5.</p>
40	<p>This phone model has headset and EU24 ports.</p> <p>To connect a headset directly, use an HIC cord in the headset port.</p> <p>The AWH-55, AWH75, AWH450, AWH460, and ABT-35S should be installed into the EU24 port (no lifter required).</p> <p>Phone's firmware version must be 4.0 or above for hook switch control and ring detection with wireless headsets.</p> <p>Version 4.0 or above is also required for MIP use.</p> <p>LKA10 dialing features require an MIP cable.</p> <p>If the LKA10 is installed into the hand receiver port, dialing features will not work and a lifter will be required.</p> <p>Lifter is required for all non-Avaya cordless/wireless headsets.</p>
41	<p>This phone model does not have a designated headset port.</p> <p>A lifter is required for all cordless/wireless headsets.</p> <p>LKA10 dialing features will not work with this phone (even with MIP).</p>
42	<p>This phone does not have a headset port.</p> <p>An HL1 lifter is required.</p> <p>The HL10 handset lifter is not compatible with this phone due to the phone's ring tones.</p>
43	<p>To connect a headset directly, use an HIC cord in the headset port.</p> <p>LKA10 dialing features will not work with this phone.</p> <p>An HL1 lifter is required.</p> <p>The HL10 handset lifter is not compatible with this phone due to the phone's ring tones.</p>
44	<p>AUX port can be used to connect the 10U100; However we recommend connecting the 10U100 into wall with the line splitter/bridging adapter.</p> <p>10U100 comes with a 4 wire (PN 28328-01) splitter/bridging adapter.</p> <p>If phone needs an 8 wire splitter/bridging adapter, contact Technical Support to obtain the 8 wire bridging adapter p/n 65857-01 .</p> <p>A lifter is required on all applicable units.</p>
45	<p>DuoPro, DuoSet, Freehand and Mirage headsets are not recommended for VoIP applications.</p>
46	<p>Please note that an additional 2.5mm to QD Cisco adapter is required (PN 65287-01)with a -CIS model.</p>
47	<p>DuoPro, DuoSet, Freehand and Mirage headsets are not recommended for VoIP applications.</p> <p>All -N1 Variants will work on this phone.</p>
48	<p>A 2.5 mm to QD cable (PN 61866-01) and a QD to QD extension cable (PN 40703-01) are required to connect any H-series headset to this telephone's headset port.</p>
49	<p>The -CIS models are recommended required if a Power Cube is used.</p> <p>DuoPro, DuoSet, Freehand and Mirage headsets are not recommended for VoIP applications.</p>
50	<p>The -CIS models are recommended required if a Power Cube is used.</p>
51	<p>Please note that the H91-CIS (PN 65654-01) and H101-CIS (PN 65656-01) headsets are recommended for use when the phone is using power cubes.</p>
52	<p>This console may be 4 or 6 wire. Contact our Specialists @ 800-544-4660 x5547 for more information.</p>
53	<p>If using Solo II phones, you may need to reverse the two black leads in the phone's handset port. Please contact Comdial for more information.</p>
54	<p>Please note that a Deka E9020 headset adapter is required for on-hook dialing.</p>
55	<p>If needed, You MUST use the older version of the handset lifter with this model phone. Use model HL1 not HL10.</p>

Id	Phone Notes
56	A jackset is required for headset installation. Please contact your phone manufacturer for details.
57	The Fujitsu modular adapter (PN 301848-01) and the Fujitsu transition cable (PN 724139-02) are required for headset use. Please contact Fujitsu for details.
58	Adapter cables are required for headset use. Please contact Plantronics @ 1-800-544-4660 x5538 to obtain these cables p/n 40287-01 (qty 2)
59	Adapter cables are required for headset use. Please contact Plantronics @ 1-800-544-4660 x5538 to obtain these cables p/n 40287-06 (qty 2)
60	Can use the Polaris model of headset.
61	Headset must be plugged into headset port.
62	If telset has optional HHEU headset adapter, use switch position #1.
63	Refer to www.plantronics.com/ipaq for compatibility information or call Technical Support @ 1-800-544-4660 x5538
64	Must do soft reset after every call to regain connection to the bluetooth headsets.
65	Calls drop using Bluetooth headset. Must do hard reset in phone to regain connection.
66	The product listed below is not available for purchase on our our website. Please call Tech Support @ 1-800-544-4660 x5538 for purchasing information.
67	Requires use of Contel-IPC BT-327M adpater or Plantronics 18709-01 (modular-to-PJ327) adpater in conjunction with headset.
68	Call Platronics for adaptor cable.
69	Plantronics has a cable needed to use our product with this phone. Call 1-800-544-4660 x5538 for information and to get p/n 40287-02 adapter cable.
70	Phones may need modification for headset use. Contact Macrocel for information.
71	Headset must be plugged into the headset port. If Display Station is strapped for carbon microphone, switch position 1 should be used. To convert to carbon microphone, call Memorex Telex.
72	Telephone may need to be programmed for headset use.
73	PTT feature on this phone does not work while headset is plugged in.
74	Switch on bottom of console must be set to 'headset' side.
75	Must use NEC ADA Headset Adapter.
76	There is a switch on the bottom of this console that must be set to "Headset".
77	This model phone has 2 ports. The standard headsets will fit the 2.5 mm port. The MX153-N3 is the only model that will give you a call answer/end (hook switch) feature.
78	This model is not compatible with the old bluetooth model M1000 you need the new M3000 or M3500 only.
79	Please note only the VOIP H series headsets are recommended on this phone. No Mirage, DuoPro or DuoSet. This is for H and P tops. This phone will not work with a handset lifter; neither HL1 nor HL10 are compatible.
80	Has Headset Port For Supervisor Monitoring and control please call Technical Support for more information @1-800-544-4660 X5538. Requires Northern Telecom headset Power Adapter P/N A0367335 for headset use.
81	Headset must be plugged into headset port. Requires use of an adpater #F2317:
82	This phone has no handset or hookswitch. Therefore, the cordless and wireless units are not compatible with this phone model.
83	The Plantronics modular-to-plug prong (PJ327) adapter Part Number 18709-01 must be used to allow adapter to connect to the phone. Call Tech Support @ 1-800-544-4660 x5538 for more information.
84	This phone can use a standard H series headset and a Polaris cable connected through the headset port. The Polaris cable is p/n 27190-01. The standard complete Polaris units are NOT an option on this phone. Due to the shape of this phone the HL1 Lifer accessory needs to be used rather than the HL10 model.
85	If Telset has a date code ending with a letter A through D, use switch position #1.
86	If Telset has a date code ending with a letter A though D, use switch position #1.
87	This is a cordless phone
88	The HL1 or HL10 Lifter accessories actually do not work on this model phone due to the angle of the telephone.
89	Telset has a 2.5mm headset port and can be used with our CHS or 'M' series headsets.
90	An adapter is required for headset use. The Plantronics modular to PJ327 adapter (PN 18709-01)
91	The Firefly feature will only work on the headset this unit comes with. The part number is 64378-01
92	The HL10 handset lifters are compatible with this phone model with an accessory (supports the handset when lifted) part number 76141-01. Currenty, The ONLY direct connect solution is a SupraPlus or TriStar H top with a Polaris bottom cable (27190-01). Base unit headsets may buzz if newer polycom power supply is used.
93	This is a princess style telephone.
94	Due to the angle of this phone the HL1 lifter is recommended and NOT the HL10.

Id	Phone Notes
95	600 series can use a Headset Recorder Options Module (HRO Module) from Rolm for on hook dialing using a P-10 or an M10 or with an EHO option a Polaris headset may be used. Call Rolm at 1-800-835-7656.
96	Requires Ackerman Headset Adapter from Rolm. 1-800-835-7656
97	Can be programmed for on-hook dialing. Consult manual for instructions.
98	You may need the HL1 liter accessory
99	The H51NS headset has special shielding for Gigaset phones. A 43038-01 cable adapter is required as well. There is a binaural headset available as well model SHS1788-02. Please call our Technical support @ 1-800-544-4660 x5538 for ordering information
100	If you have a Siemens HA Option Module it will create a headset port and our Polaris headsets will be an option to use. If you have the HA+ Option Module you can use a M12 on switch setting #1 with no batteries.
101	The Polaris headsets are the direct connect solution for this phone. Also a Siemens Acoustic Adapter adds a Supervisor port and a Recorder Interface Device.
102	If you have a Siemens Acoustic Adapter it will create a headset port and our Polaris headsets will be an option to use. The Acoustic adapter also creates a Supervisor port and a Recorder Interface Device.
103	No one touch capability
104	This phone has automatic gain control.
105	If console is 6 wire. Contact Plantronics @ 1-800-544-4660 x5547 for compatibility information.
106	Plantronics has a cable needed to use our product with this phone. Call 1-800-544-4660 x5538 for information and to get p/n 40287-03 adapter cable.
107	If Telset has a date code before 4/88, use switch position #1.
108	These phones have a headset feature switch.
109	On-hool dialing with C-HSU-A card from TIE.
110	On-hook dialing with B-TB4-C card from TIE. Phone date code must be after 1/1/68.
111	Toshiba offers an adapter for on hook dialing. If using this adapter with models M10/M12 or M22 use switch setting #1.
112	The CS50-USB & 510-USB will require the Persono Call Software in order to obtain the Call answer end feature. See the Softphone compatibility chart by clicking on the following link: http://www.plantronics.com/media/downloads/PerSonoCallSoftphoneCompatibility.pdf